



# A.C. MODULAR GENERATOR SYSTEM

OWNERS MANUAL

MODEL#: M-115 & TM-115

---

**Table of Contents**

<b>Section</b>	<b>Page</b>
<b>Disclaimer .....</b>	<b>5</b>
<b>Description of Product.....</b>	<b>6</b>
<b>System Specifications .....</b>	<b>9</b>
<b>Pre-Installation Guide .....</b>	<b>11</b>
<b>Installation Guide .....</b>	<b>18</b>
<b>Hose Installation Guidelines .....</b>	<b>22</b>
<b>M-115/TM-115 Operation.....</b>	<b>29</b>
<b>Switch status lights.....</b>	<b>29</b>
<b>Special Operating Instructions .....</b>	<b>34</b>
<b>Maintenance Instructions .....</b>	<b>35</b>
<b>Troubleshooting Guide.....</b>	<b>38</b>
<b>M-115/TM-115 Model Matrix.....</b>	<b>45</b>
<b>M-115/TM-115 Generator Major Component Numbers.....</b>	<b>46</b>
<b>M-115 Assembly drawing .....</b>	<b>47</b>
<b>M-115 Assembly drawing .....</b>	<b>48</b>
<b>Pump Adjustment.....</b>	<b>51</b>
<b>Manufacturers Limited Warranty .....</b>	<b>56</b>

**WARNING:**

*Do not install or operate the A.C. modular generator system without reading this entire manual.*

*The A.C. modular generator system will generate enough voltage to produce a fatal electrical shock. Do not perform any wiring installations or modifications while the system is operating. Never touch any live connections while the system is operating. Never operate the system with the generator wiring enclosure open. Install and secure cover before operating.*

*The installation of the Smart Power® A.C. modular generator system is to be done in accordance with applicable sections in the National Fire Protection Association's document NFPA 1901, National Electrical Code®, and/or other applicable, recognized electrical codes and by a certified electrician.*

*Never directly expose the generator to any liquids, especially water, oil, or solvents. Electrical shock, fire and/or damage to the generator can occur and will void the system's warranty.*

*Smart Power hydraulic generators, as well as all generators, must be sufficiently protected from the environment to prevent damage to the stator. Smart Power stators go through a very important double-dip coating process prior to generator assembly, however, exposure to direct water sprays can cause the stator to electrically short. Generator damage and electrical shock can occur.*

*Caution should be taken during truck pressure washing, since water damage to the generator can occur if directly sprayed with high water pressure. Though Smart Power generators are enclosed as much as possible, direct spray through the cooler, fan or open lid can still cause such damage.*

*Excessive road spray/salt can also cause an electrical short of the stator in the generator and can also shorten the generator's operating life. To prevent this type of damage, do not mount the system where it will be exposed to road spray.*

*Evidence of water damage, road spray/salt infiltration, and improper mounting will void the generator warranty.*

*Avoid physical contact with any of the components of the A.C. modular generator system during its operation or immediately after its use. The components of this system will get hot enough to cause burns and could ignite combustible materials.*

*Do not mount or locate anything inside of the framework. System overheating could result and void the system's warranty.*

---

*Never operate the system with leaks of any type. Clean up any hydraulic fluid that is spilled or has leaked out of the system. Hydraulic fluid is combustible, and ignition may occur.*

*With the exception of oil filter periodic replacement, never modify or remove any of the components within the tray assembly.*

*Never modify or remove any of the components within the pump or the controls mounted to the pump. This includes all fittings and tubing that are originally provided with the A.C. modular generator system.*

*Never make any adjustments to the pump other than for flow control. If it appears the pump needs to be adjusted, contact Smart Power® Systems at (231) 832-5525 before proceeding. Damage to the generator from improper pump adjustment will void the system's warranty.*

*Never attempt any adjustments or repairs to the A.C. modular generator system (other than pump flow control) while the vehicle engine is running and the PTO is engaged.*

*Never operate the system with the hydraulic fluid exceeding 175°F. Above this temperature, hydraulic fluid can rapidly oxidize and deteriorate causing generator performance problems. Operating the system while the hydraulic fluid is above 175°F will void the system's warranty.*

*Hydraulic fluid is combustible and toxic. In the event of human contact with hydraulic fluid, generously flush body part (eyes, skin, etc.) with running water. Avoid inhalation of any oil mist or vapor. Do not ingest hydraulic fluid. In case of fire, use foam, dry chemical or carbon dioxide to extinguish flame.*

*Do not exceed the wattage rating of the generator. The generator may be permanently damaged and the generator and hydraulic components may reach temperatures that could cause severe burns upon human contact with the components. Operating the generator system at wattages above the system's rating will void the system's warranty.*

*Disengage the system immediately if a hydraulic fluid leak is detected. Operation of the A.C. modular generator system with low fluid level will result in permanent damage to the hydraulic components in the system and will void the system's warranty.*

*Never attempt to operate the system without hydraulic fluid. Always maintain a fluid level between ½ to ¾ full in the sight gage. When installing the system, fill the pump case with 2 pints of hydraulic fluid (Dexron III) before engaging the system. Failing to do so will void the system's warranty.*

*Operating the A.C. modular generator system in the presence of flammable vapors may result in an explosion.*

---

*Use only hoses that meet or exceed the minimum requirements specified in this manual. A ruptured hose can cause personal injury and/or damage to the generator system.*

*Do not operate the system under electrical load with air in the hydraulic fluid (the system will make a growling sound). Do not allow anything to contact the hydraulic hoses that will cause a kink, pinch or chaffing. The A.C. modular hydraulic system generates hydraulic pressures approaching 4000 psi. A ruptured hose may result from abrasion, discharging hot, high-pressure hydraulic fluid, which can cause serious personal injury, fire, and/or damage to the system.*

*Never remove the guards on the generator to expose the rotating fan or motor coupling. Personal injury will result if fingers, hair or loose clothing come in contact with rotating components.*

### **Disclaimer**

Although SPS has taken all reasonable care to ensure that the information contained in this installation manual (including without limitation, references, databases, resources, specifications, illustrations and instructions) was accurate in all material respects at the time of publication, SPS PROVIDES NO ASSURANCE, REPRESENTATION, WARRANTY OR GUARANTEE, expressed or implied (including third party liability), with regard to this manual, including without limiting the generality of the foregoing, with regard to its accuracy, reliability or completeness. The entire information contained in this installation manual is provided by SPS "AS IS" and without warranty of any kind, express or implied, including (but not limited to) any implied warranties or merchantability, fitness for any particular purpose, or non-infringement. Accordingly, by using the SPS unit and this information, you agree that, to the greatest extent permitted by law, SPS (including, without limitation, its subsidiaries, affiliates, agents, officers, directors, employees and insurers) is not and will not be liable for losses or damages resulting from this installation manual, its use, any information contained therein or the installation of the SPS unit.

This installation manual contains references to certain database and resources. As SPS has no control over these database and resources, you acknowledge and agree that SPS is not responsible or liable for any content, advertising, products, information or other materials on or available from such database or resources. You further acknowledge and agree that SPS shall not be responsible or liable, directly or indirectly, for any damage or loss caused or alleged to be caused by or in connection with use of or reliance on any such content, information goods or services available on or through any such database or resources. All product illustrations and specifications are based upon current information at the time of publication. Although descriptions are believed correct, complete accuracy cannot be guaranteed. SPS reserves the right to make changes of any kind at any time, without notice or obligation, in the information contained on this installation manual. All data and information of any kind are subject to change without notice and SPS assumes no obligation to update or correct information in this manual.

As some states do not allow the exclusion or limitation of liability for consequential or incidental damages, the limitation contained herein may not apply to you. In such states, SPS' liability is limited to the greatest extent liability limitation is permitted by applicable law.

## Description of Product

### **Hydraulic Generator Applications:**

These heavy-duty electronically controlled generator systems have been designed to meet the most demanding mobile applications. It provides 120/240 volt AC @ 60 Hz from no-load to 15 kW.

### **How Our System Works:**


A generator driven by a hydraulic motor delivers the electrical power. The motor turns at 1800 RPM as controlled by the flow of hydraulic fluid through an electrically controlled proportional valve. The proportional valve is directly driven by the system controller. The piston pump delivers fluid to the proportional valve driven by an installer-supplied PTO mounted to the vehicle's transmission.

Heat generated in the hydraulic fluid as it passes through the various components in the system is cooled by a heat exchanger and fan. A filter removes impurities in the fluid. A venturi boost assembly monitors the volume of oil in the hydraulic circuit and feeds the system from the reservoir as needed.

Essentially the only system maintenance required is periodic replacement of the hydraulic fluid filter and adding hydraulic fluid to maintain the fluid level between  $\frac{1}{2}$  and  $\frac{3}{4}$  full in the sight gage.

Generator hydraulic and electrical schematics: see Figure 1 and Figure 2.



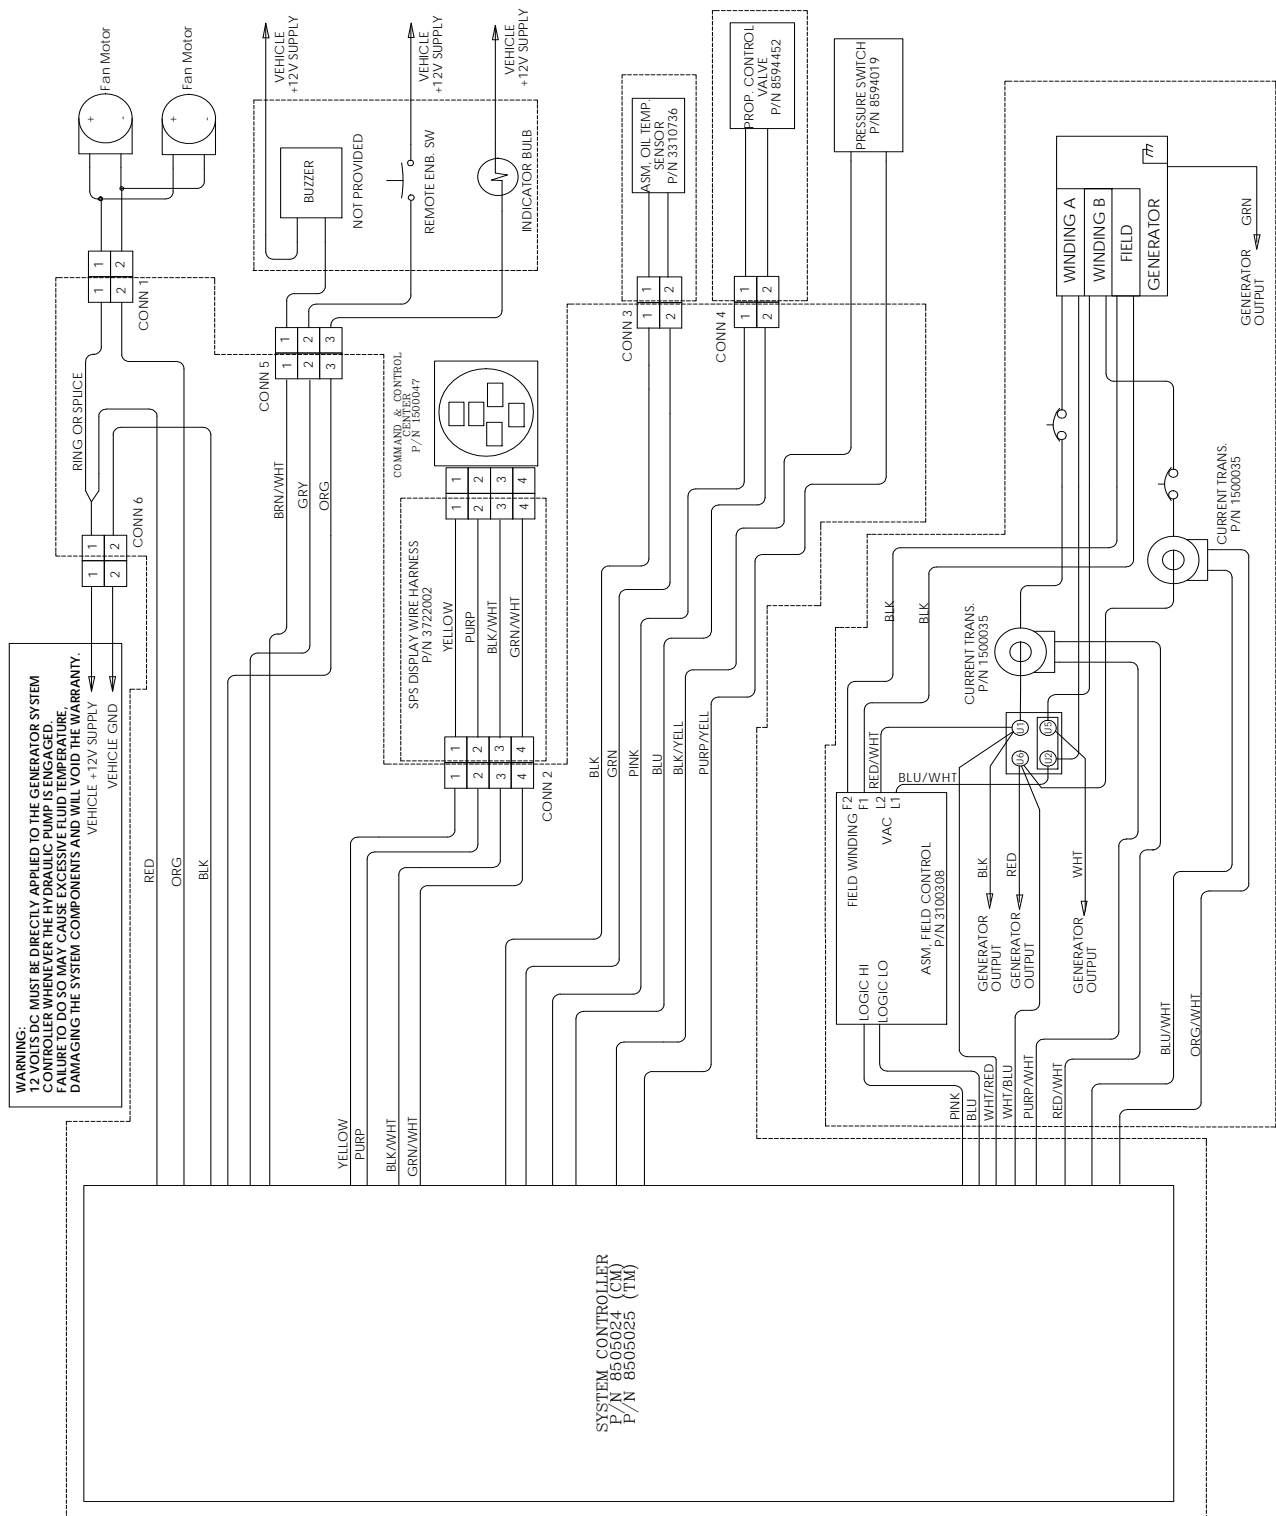

Electrical schematic for M-115 and TM-115 generator system  
Figure 2

**System Specifications**

<b>Model of generator</b>	<b>M-115/TM-115</b>
<b>Generator Type</b> Speed Frequency Voltage Amperage Motor Starting Voltage Regulation Power	AC Inductive 1800 RPM 60 Hz 120/240 VAC 125A @ 120 VAC -or- 63A @ 240 VAC 300 percent surge Electronic 15 kW continuous, 16.5 kW peak
<b>Hydraulic Motor</b> Maximum Speed Motor Shaft Size Port Size	Piston, 28cc 6300 RPM 1.181 inches (keyed) SAE ½"
<b>Hydraulic Pump</b> Operating Speed Standard Shaft Mounting Flange Displacement Continuous Pressure (Max) Peak Pressure Standard Rotation (See Figure 34&35 for pump style drawing)	Piston w/pressure compensated control <b>Style A:</b> 750-2600 RPM <b>Style B:</b> 750-3000 RPM SAE C 1.25" Keyed SAE C-2 bolt mount <b>Style A:</b> 74cc <b>Style B:</b> 80cc per revolution <b>Style A:</b> 4000 psi (280 bar) <b>Style B:</b> 4600 psi (320 bar) <b>Style A:</b> 5100 psi (350 bar) <b>Style B:</b> 5075 psi (350 bar) Engine right-hand rotation (opposite engine rotation available upon request)
<b>Dry Weight of Hydraulic Pump</b>	90 lbs.
<b>Oil Cooler</b> Dimensions Inlet/Outlet Fittings	2.25"D x 22.4" W x 9.5" W SAE-12
<b>Fans</b> Dimensions Voltage Amperage	Dual, 11 Inch Pusher 12.5" L x 11.5" W 12 Volts DC 9.4 Amps (Each)
<b>Filter</b>	10 Micron
<b>Hydraulic Fluid (recommended)</b> <b>Alternate Hydraulic Fluid</b> Maximum Viscosity  Op. Temp. range (deg. F.)	Dexron III ISO Approved Hydraulic Fluid 4600 SUS (1000mm <sup>2</sup> /S) 60 SUS (10mm <sup>2</sup> /S) -13° F to 195° F
<b>Hoses</b> Motor Inlet All Others	JIC STD 4000 psi, SAE 1250 psi, SAE

**Table 1**

**System Specifications (cont.)**

<b>Model of generator</b>	<b>M-115/TM-115</b>
<b>Fittings</b>	SAE
<b>Dry Weight (without pump)</b>	M-115 – 442 lbs. TM-115 – 490 lbs.
<b>Dimension of Tray Asm.</b>	M-115: 32.7" L x 23" W x 19" H (Including Reservoir) TM-115: 43.25" L x 21.13" W x 17.7" H (Including Reservoir)
<b>Normal Operating Temperature</b>	0°F to 120°F

**Table 1 (cont.)**

**System Requirements**

<b>Power Take-Off Attachment</b>	Pump must be remote mounted and driven by the PTO via a drive shaft.
<b>Power Take-Off Rotation</b>	Engine rotation (systems for opposite engine rotation available upon request).
<b>Power Take-Off Speed (extended range)</b>	<b>750 to 3000 RPM</b>

**Table 2**

---

### Pre-Installation Guide

1. Verify that the Power Take Off (PTO) and the pump rotations match.

To identify the pump rotation, check the pump part number found on the metal tag attached to side of the pump. A right hand rotating pump (the standard pump offered by Smart Power Systems), will have the letter “R” in its part number.

Style A Example: A10V0 74 DFR-1/31 **R** PSC.

Style B Example: K3VL 80/B-1**RR** KS-L1

A left hand rotating pump will have the letter “L” in its part number.

Style A Example: A10V0 74 DRF-1/31 **L** PSC.

Style B Example: K3VL 80/B-1**RL** KS-L1

To determine the PTO rotation, check the PTO manufacturer’s specification or observe the PTO when it is engaged with the vehicle’s engine running.

A right hand rotating pump requires a PTO that turns counter-clockwise when looking at the free end of the PTO shaft. A left hand rotating pump requires a PTO that turns clockwise when looking at the free end of the PTO shaft.

#### **WARNING:**

***Operating the pump with reverse rotation will damage the pump and void the system’s warranty.***

2. Verify that the PTO ratio is properly sized to provide adequate speed to the hydraulic pump during normal operation of the generator system. The PTO output speed must be between 750 to 2,600 RPM for normal operation.

Example: For a M-115 or a TM-115 system, that is to operate at 600 RPM engine speed:  $PTO\ Ratio = 750\ RPM \div 600\ RPM = 1.25$  or 125%

#### **WARNING:**

***Never exceed the maximum pump shaft speed. Pump failure or premature pump wear will result. Doing so will void the system’s warranty.***

3. The hydraulic pump used for the SPS 15kW systems is too heavy to mount directly onto a PTO. The pump must be mounted remotely with a bracket to either the vehicle’s transmission or the vehicle’s chassis, and driven by a drive shaft. Contact

the PTO manufacturer and/or the drive shaft manufacture for installation instructions for remote mounting a hydraulic pump.

4. Verify that the drive shaft selected will couple to both the PTO and the SPS supplied pump. Pumps supplied by Smart Power® Systems for this system have an SAE C, 1.25" keyed shaft.

**WARNING:**

***The installer must provide guarding to prevent damage to the pump seals from road debris. Also, properly sized and installed vibration isolators must be used if the pump is mounted to the chassis. Failure to do either will void the system's warranty.***

***Never use an unbalanced drive shaft to drive a remotely located pump. An unbalanced drive shaft will cause premature wear of the pump and will void the system's warranty.***

***Do not approach a running A.C. modular generator when wearing long, loose items such as hair, jewelry, ties, clothing, etc. Direct contact with a rotating drive shaft can cause serious personal injury and/or damage to the system.***

5. Obtain the following hoses of the necessary length for the installation:
  - a) Pump inlet hose: 1" SAE 100R1AT-16 hose with Parker hose ends P/N 10643-16-16. **Note:** Maximum hose length is 20'.
  - b) Pump outlet hose: 5/8" SAE 100R13-10 rated to **4000 PSI** (use Parker hose ends, part number 10671-10-10). **Note:** Maximum hose length is 20'.
  - c) Pump case drain hose: 5/8" SAE 100R1AT-10 (use Parker hose ends, part number 10643-10-10). **Note:** Maximum hose length is 20'.

**WARNING:**

***Do not install hose ends until proper hose length has been determined.***

***Never install a hose in a location where it will rub against another surface or abrasion member.***

***Do not position hoses with tight bend radii. Consult the hose manufacturer's installation guidelines. Tight bends may kink and cause serious damage to the system and will void the system's warranty.***

***Use caution when tightening the hose ends to prevent the hose from becoming twisted.***

---

***Never install a 90° fitting at the pump inlet or outlet. Avoid the use of flow restricting fittings.***


***Do not form loops in the hose that may collect air or kink. Run hoses as straight as possible (but not taut) between connections.***

***Do not exceed hose lengths of 20 feet.***


6. Mounting considerations:

M-115: SPS model M-115 has been specifically designed to be mounted in a compartment or enclosure on a vehicle. It must be covered to protect it from rain, water spray, etc. However, this system requires ventilation to prevent overheating of the hydraulic fluid and/or the generator. Reference Figure 3 and Figure 4 for the minimum clearances around the perimeter of the generator's tray assemble. Also, do not position any obstructions directly in front of the system's oil cooler. Position the system in a manner that will prevent the hot air exiting the oil cooler from being drawn back into the generator tray. This may require sealing the opening in the enclosure to the perimeter of the oil cooler. If the system cannot be installed without maintaining the minimum clearances as indicated, or if you have any questions relative to the installation of a M-115, contact Smart Power® Systems at (231) 832-5525.


TM-115: SPS model TM-115 has been specifically designed to be mounted on top of a vehicle, in the open, without requiring any additional coverings. Reference Figure 5 and Figure 6 for minimum clearances around the perimeter of the generator's tray assemble. Also, do not position any obstructions directly above the system's oil cooler. If a system cannot be installed without maintaining the minimum clearances as indicated, or if you have any questions relative to the installation of a TM-115, contact Smart Power® Systems at (231) 832-5525.

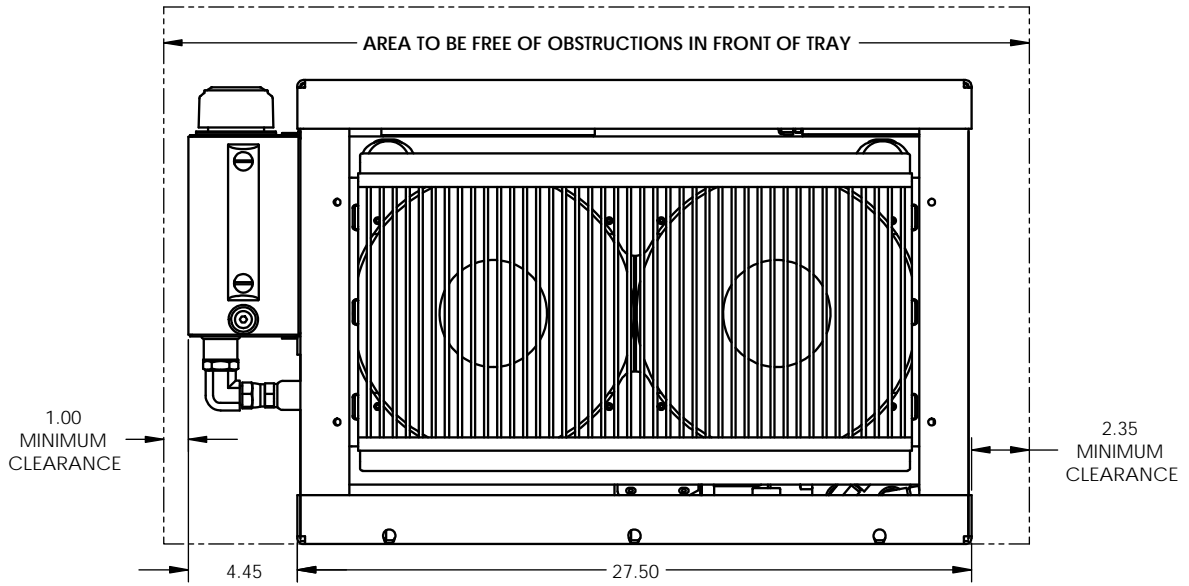


**Front view of M-115 tray assembly showing minimum clearance  
for proper ventilation  
Figure 3**

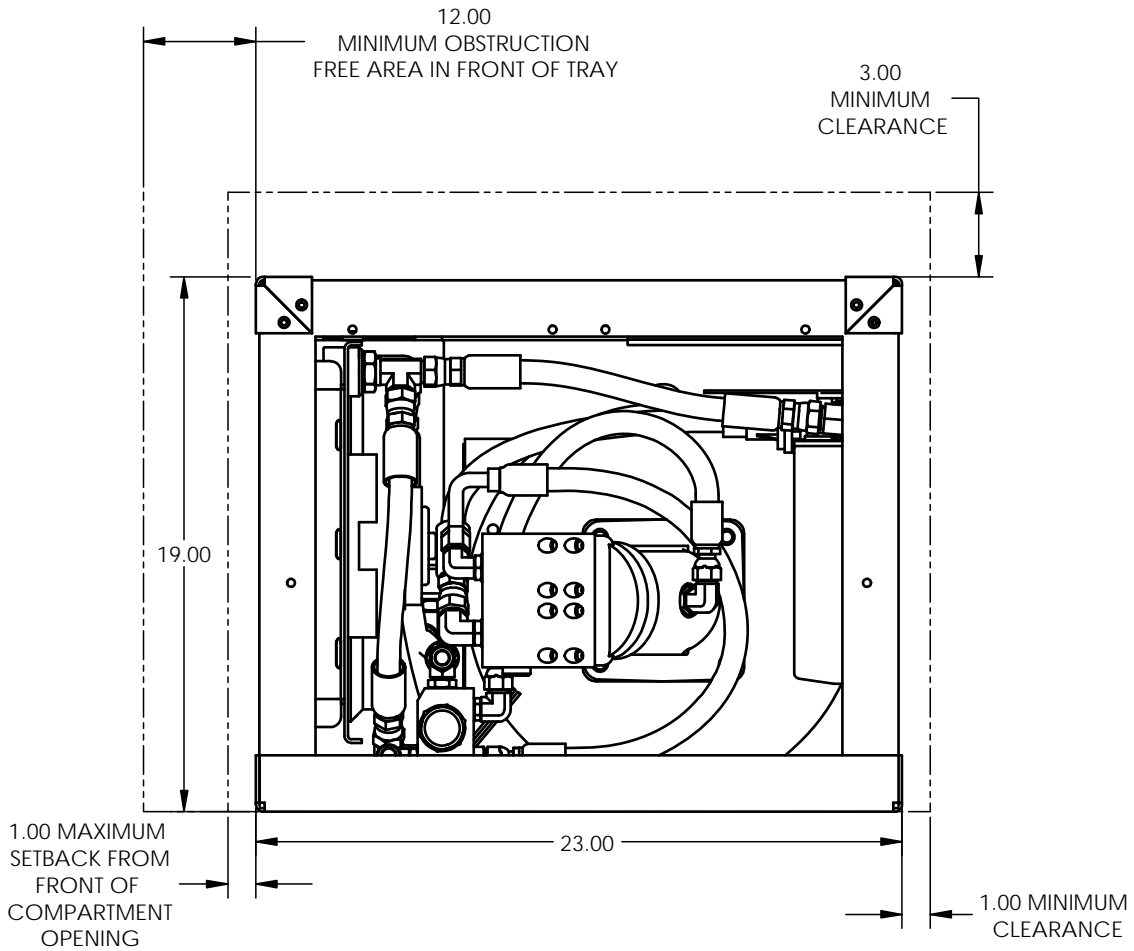

**Side view of M-115 tray assembly showing minimum clearance  
for proper ventilation  
Figure 4**

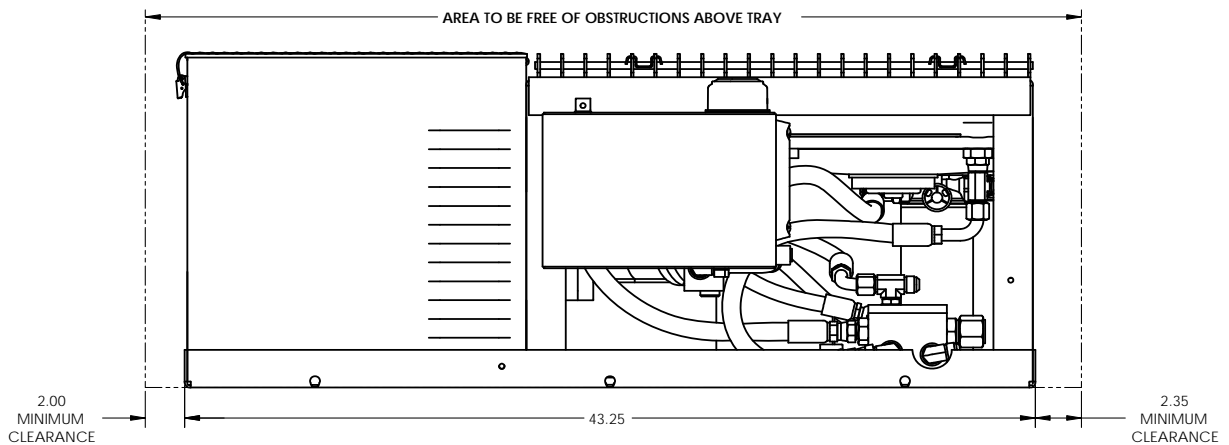

**Front view of TM-115 tray assembly showing minimum clearance  
for proper ventilation  
Figure 5**

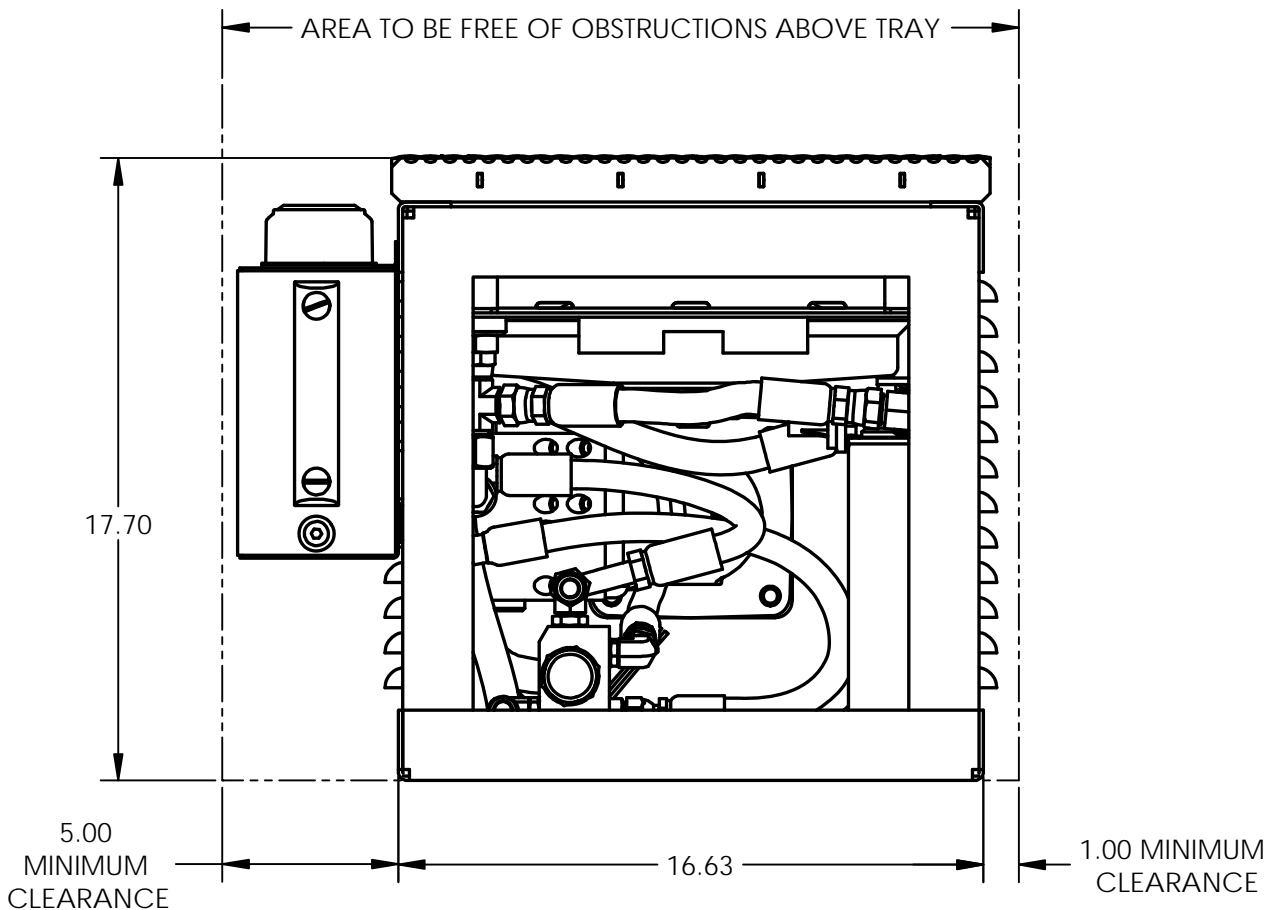

**Side view of TM-115 tray assembly showing minimum clearance  
for proper ventilation  
Figure 6**

**WARNING:**


***Do not mount the hydraulic pump, tray assembly or reservoir in any location that is not well ventilated. External heat sources elevating the hydraulic fluid and/or the generator temperature will result in premature wear and degraded system performance and void the system's warranty.***

7. The tray and reservoir assemblies must be mounted in a position that is higher than the pump. If the pump inlet hose is 10' in length or less, the tray and reservoir assemblies must be a minimum of 12" higher than the pump. If the pump inlet hose is longer than 10', elevate the tray and reservoir assemblies an additional 12" for every additional 10' of pump inlet hose length. If the reservoir must be remotely mounted (not directly attached to the tray assembly) position the reservoir at the

same elevation as the tray assembly or higher. See below for examples of minimum tray and reservoir assembly elevations above the pump:

<u>Pump inlet hose length</u>	<u>Minimum tray and reservoir elevation (above pump)</u>
0 – 10 ft.	12 inches
15 ft.	18 inches
20 ft.	24 inches

8. Locate a position to mount the SPS Command & Control Center. The ideal location for the Command & Control Center will be in an area that is easily seen and accessed by the generator operator. When the generator system is in use, the Command & Control Center will continuously show the status of the generator, including faults (warnings) if they occur. The Command & Control Center can also be used to engage and disengage the generator. The Command & Control Center is water sealed, and operates on low voltages so pump house mounting is permissible. A 15 ft. water sealed harness is provided to connect the Command & Control Center to the system controller mounted within the generator tray assembly. See Figure 7 for the dimensions of the Command & Control Center.

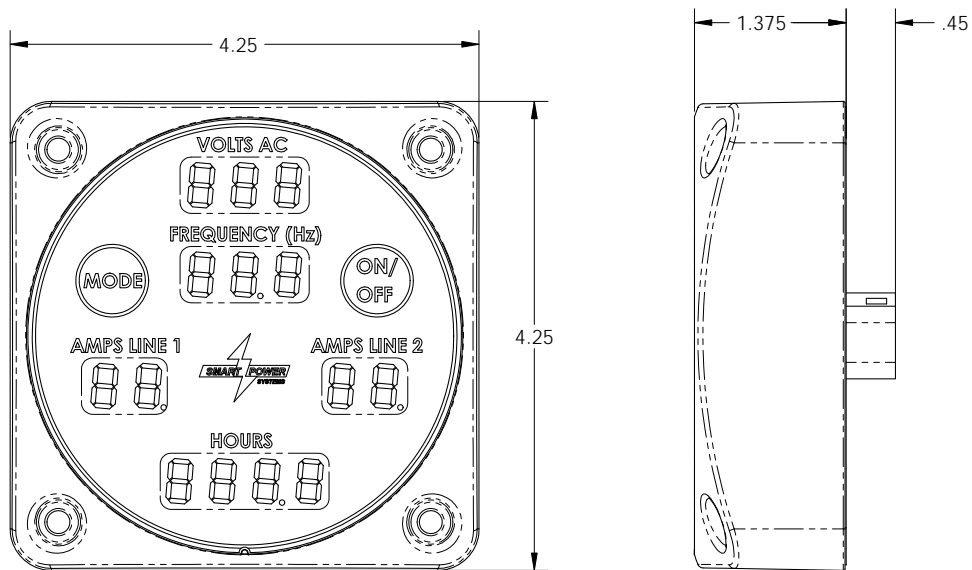

**Command & Control Center, P/N 150047**  
**Figure 7**

### Installation Guide


1. Mount the pump securely to the vehicle chassis or transmission. Install the drive shaft connecting the pump to the Power Take-Off (PTO) per the installation guidelines provided by the PTO and drive shaft manufactures.

#### **WARNING:**


***Always mount the hydraulic pump in a position with the pump controls up. Mounting the pump in any other orientation will not allow hydraulic fluid in the pump to reach the correct level before starting, causing premature wear of the pump, thus voiding the system's warranty.***

***The pump and undercarriage components will corrode if they're left unprotected. It is advisable to paint them before completing the installation.***

2. Locate and bore mounting holes for generator tray assembly as shown in Figure 8 and Figure 9. Maintain minimum clearances as indicated in Figure 3, Figure 4, Figure 5, and Figure 6.

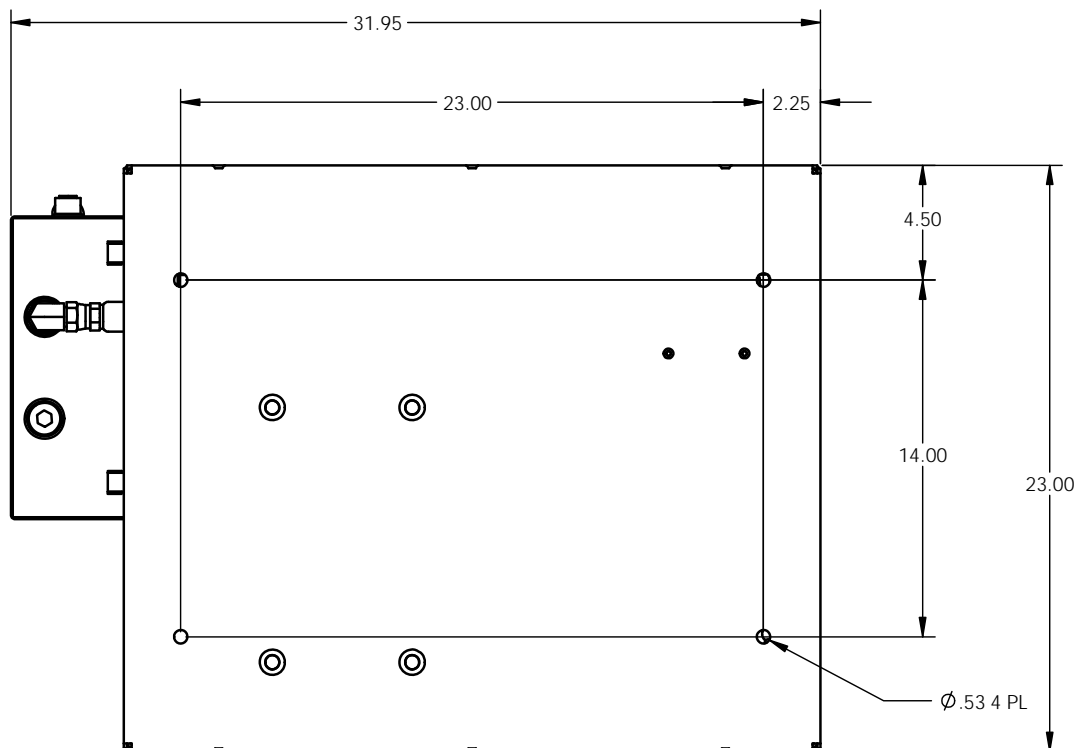


Hole pattern for mounting M-115 tray assembly  
Figure 8

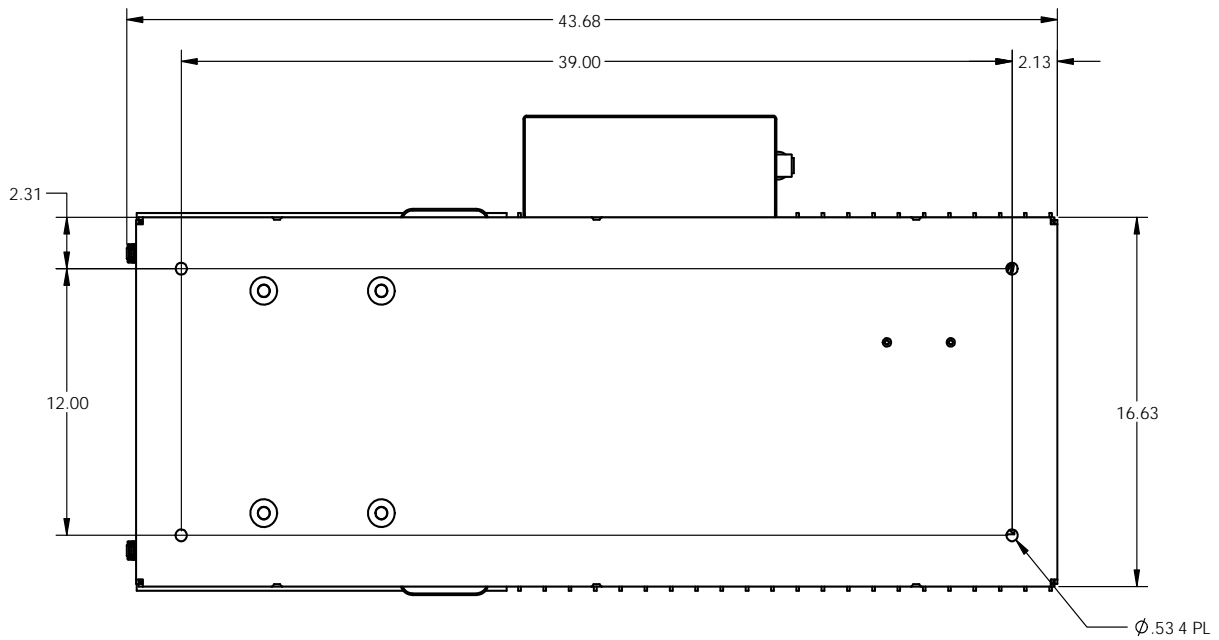

**Hole pattern for mounting TM-115 tray assembly  
Figure 9**

3. Mount the tray assembly as high as possible within the structure of the vehicle. The ideal location for the generator is at the top of the truck in the dunnage area. The manufacturer must also take sufficient precautions to ensure that the generator is not mounted in the path of the deck gun/water cannon.
4. Mount the hydraulic generator tray securely to vehicle. Secure the generator to vehicle using mounting hardware (not included), as shown in Figure 10.

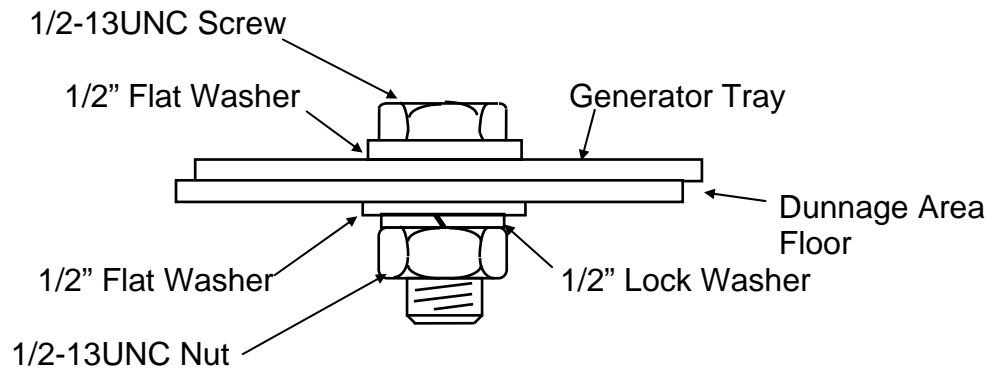

**Figure 10**


**WARNING:**

Never mount the Generator on its side or upside down. Always mount the generator upright with its base horizontal. Always mount the reservoir with the filler cap upward. Improper mounting will lead to poor performance and damage to the system and will void the system's warranty.

Never operate an AC modular generator system that is not secured in place; damage will result.

Do not mount the hydraulic pump, tray assembly or reservoir in any location that is not well ventilated. External heat sources elevating the hydraulic fluid and/or the generator temperature will result in premature wear and degraded system performance and void the system's warranty.

5. Mount Command & Control Center:
  - a. Create hole pattern as shown in Figure 11.
  - b. Mount Command & Control Center to vehicle using #10 stainless steel fasteners.
  - c. Connect Command & Control Center to system controller using p/n 3722002 harness.

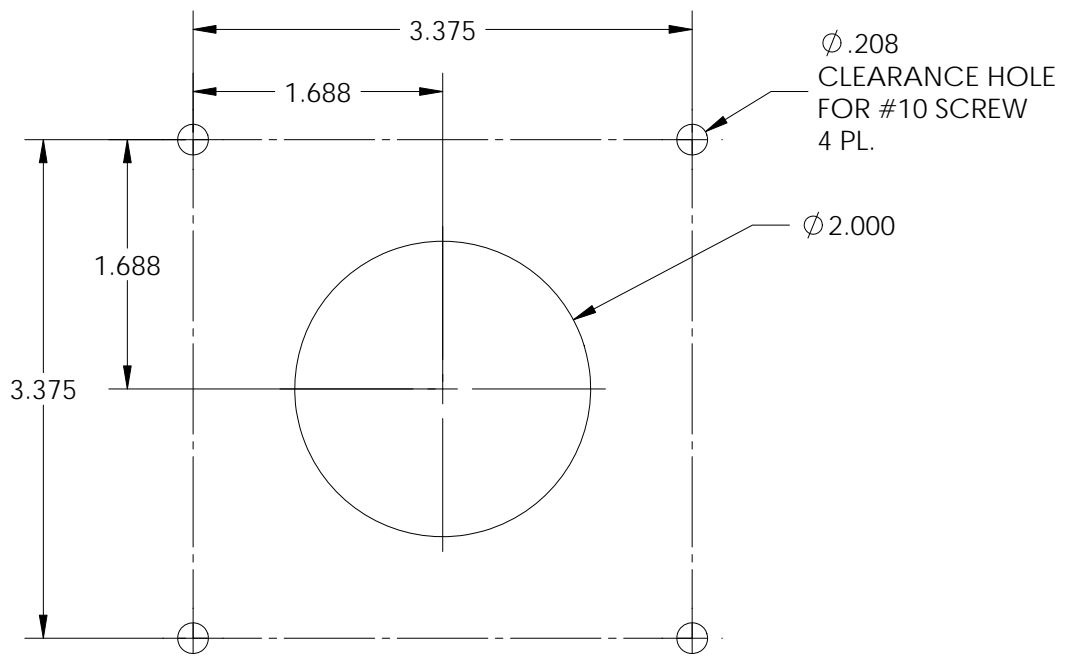

**Hole pattern for Command & Control Center  
Figure 11**

6. Flush the hoses with fresh hydraulic fluid (Dexron III). Install hoses and tighten hose ends, using the **Hose Installation Guidelines.**

**WARNING:**

***Never operate the system with the pump case drain plugged. Damage to the pump seals will result. To do so will void the system's warranty.***

***Lubricate hose fitting o-rings with clean hydraulic fluid (Dexron III) before installation to prevent damage to them.***

### Hose Installation Guidelines

***Never install a hose without first flushing it with clean hydraulic fluid to remove any debris.***

***Never install a hose in a location where it will rub against a surface.***

***Do not position hoses with tight bend radii. Tight bends may kink and cause serious damage to the system. Consult the hose manufacturer's guidelines when installing hoses.***

***Use caution when tightening the hose ends to prevent the hose from becoming twisted.***

***Never install a 90° fitting at the pump outlet or inlet.***

***Never use an inlet line fitting less than 1".***

***Never install a hose tightly between connections. Leave length for the hoses to expand.***

***Do not form loops in the hose that may collect air or cause kinking. Run hose as straight as possible (but not taut) between connections.***

***To keep debris out of hoses while being positioned, cover the ends.***

***Do not bundle installed hoses tightly together with banding. Hoses must have freedom to expand.***

***Do not operate the system with external stresses applied to the hydraulic hoses. The A.C. modular hydraulic system generates hydraulic pressure approaching 4000 psi. A ruptured hose may result, causing personal injury or damage to the system.***

***Do not put any substance into the reservoir other than clean, fresh Dexron III hydraulic fluid. Doing so will void the system's warranty.***

7. Connect the vehicle's breaker panel to the generator output. The generator is pre-wired to supply 120/240 VAC, with the generator frame bonded to ground. Route the generator output conduit/wiring to the breaker panel, and carefully cut the conduit to length without cutting the wire insulation. A conduit connector has been provided to connect the conduit to the breaker panel.

---

Connect the (4) four generator output wires to the breaker panel as follows (see Figure 2 for electrical schematic and wiring diagram):

Phase A:	Black wire (120 VAC)
Phase B:	Red wire (120 VAC)
Neutral:	White wire
Ground:	Green wire

**Note:** The generator output can also be configured for 120 VAC only output. Contact Smart Power® Systems at (231) 832-5525 for more information.

To completely utilize the generator's output capabilities, the 120 VAC loads must be equally divided between the generator's two main windings. Before wiring the vehicle, calculate the wattage of each 120 VAC load that will be connected to the generator. Next, create two groups of loads based on total wattage (add the individual wattage of each load together). Exchange loads between the two groups until the total wattage of the two groups is as close as possible to being equal. Wire the system with one group connected to Phase A (BLACK) and neutral, with the other group connected to Phase B (RED) and neutral.

**WARNING:**

***To ensure proper voltage regulation, during the operation of generator system, the load difference between Phase A and Phase B must never exceed 20%. Damage to generator system caused by operating it with an unbalance load will void the system's warranty.***

***Wiring of the A.C. modular generator system and electrical distribution throughout the vehicle must be done in accordance with applicable sections in the National Fire Protection Association's document NFPA 1901, the National Electrical Code® and/or other applicable, recognized electrical code and by a certified electrician.***

***Smart Power Systems' A.C. modular generators are supplied with the neutral bonded to ground. Refer to National Fire Protection Association's document NFPA 1901, National Electrical Code®, and/or other applicable recognized electrical codes before wiring an SPS A.C. modular generator system.***

***Never wire any loads to the generator's output without a circuit breaker in series with the load. Damage to the generator, to the components within that circuit, electrical shock, or fire may result if a short occurs in an unprotected circuit. Run all 120 VAC and 240 VAC electrical connections between the generator and the distribution panel in conduit. Bypassing the SPS factory installed breaker will void the system's warranty. Replacement breakers must be obtained from Smart Power Systems approved sources only.***

---

***Do not perform any wiring installations or modifications while the system is operating. The A.C. modular generator system will generate enough voltage to produce a fatal shock.***

***Never touch any live connections while the system is operating.***

***Never operate the system with the generator cover removed.***

8. Connect 12 VDC (vehicle battery positive) to the generator's system controller input (reference Figure 2). Connect the RED wire from the system controller, marked "Vehicle +12V supply" to the vehicle's ignition circuit through a 30 amp fuse. Connect the BLACK wire to the vehicle's ground (vehicle battery negative).

**WARNING:**

***12 volts DC must be directly applied to the generator system controller whenever the hydraulic pump is engaged. Failure to do so may cause excessive fluid temperature, damaging the system components and will void the warranty.***


***Never come near a running fan with loose items such as long hair, clothing, jewelry, ties, items that can fall out of pockets, etc.***

***Do not modify or remove fan guarding. Serious personal injury may result if clothing, fingers or other body parts come in contact with rotating blades.***

***Never operate the system with fan disabled or removed. System over-heating will result and this will void the system's warranty.***

***Improper wiring of the generator system to the vehicle may discharge the vehicle battery, cause a fire, or cause improper operation of the generator system.***

9. Bleed air from the hydraulic system:
  - a. Turn off the generator's main power breaker. See Figure 12.
  - b. Open the case drain hole on the pump by removing the plug. See Figure 34.
  - c. Fill the Gen-set reservoir with fresh Dexron III hydraulic fluid until the sight gauge is full. As hydraulic fluid begins to fill the hoses, maintain the level of fluid in the reservoir until hydraulic fluid begins to flow from the case drain hole on the pump. Replace the case drain hole plug.
  - d. Start the vehicle and allow the engine to idle.

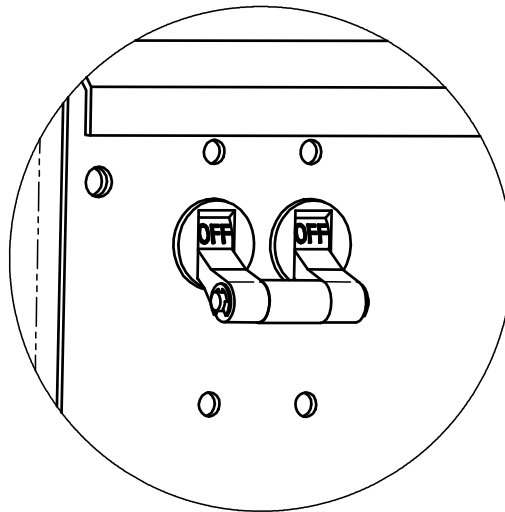

**Main power breaker**  
**Figure 12**

**WARNING:**

***Never operate the system without the filler/breather cap installed. Contaminants may enter the hydraulic fluid through the filler opening, causing premature wear on the hydraulic components and void the system's warranty.***

***Never apply a load to the generator while there is air trapped in the hydraulic fluid. Damage to the system's hydraulic components, as well as ruptured hoses, may result and void the system's warranty.***

***Always run the system for 20 minutes with no electrical load after installation, after replacing the hydraulic fluid and the filter, or after making any other repairs that may allow air into the hydraulic system. Failure to do so will void the system's warranty.***

- e. Ensure the generator purge option is enabled.

**Note:** The generator is shipped from the factory with the purge option enabled.

The system controller has been designed to provide a purge option. With this option applied, the generator will turn at a reduced speed to minimize wear to the system's hydraulic components while purging air from the system. Once enabled, the purge option will remain set until automatically reset by the system controller. The system controller will reset the option once the following two conditions are met:

1. The hydraulic system has been purged for a total of at least 30 minutes.
2. Of those 30 minutes, at least 20 occurred with the generator on.

## Enabling System Purge Option

The purge option can also be set by performing the following steps:


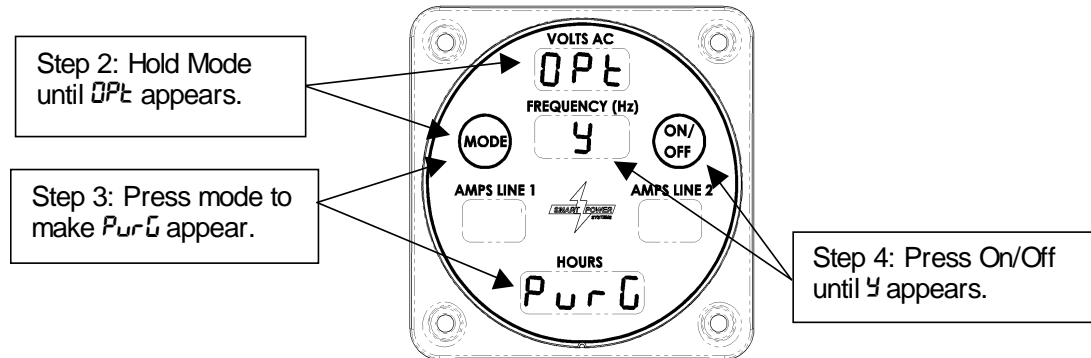


Figure 13

1. If the Command & Control Center is dark, press the Mode switch to put the display into Normal mode.
2. If the Display looks like Figure 14, the purge option is enabled.
3. Otherwise, press and hold the Mode switch until OPT appears (more than 10 seconds). Reference Figure 13.
4. Press (and release) the Mode switch until PurG appears.
5. Press the On/Off switch until a 4 appears, indicating Purge option is Active.
6. Return to system purge display by pressing the Mode switch repeatedly until the screen shown in Figure 14 is displayed. Purge will still be active.

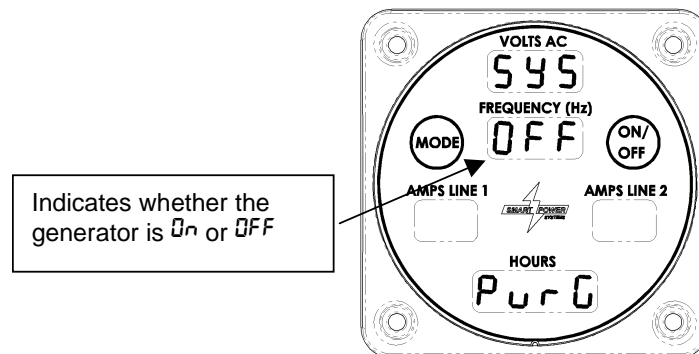

Example of normal display with purge option set  
Figure 14

- f. Engage the Power Take-Off (PTO). (Note: Pump may sound rough for a few minutes due to entrapped air.) Make sure the Command & Control Center displays the string "OFF" as shown in Figure 14, press the On/Off switch to turn the generator off, if needed.

- 
- g. Check for hydraulic fluid leaks, all hose connections must be tight. **Monitor the hydraulic fluid level, adding fluid as needed to keep the level in the sight gauge full.**
  - h. After 10 minutes, the system controller will automatically switch the generator to “On”. Check to see that the generator is turning (The frequency display should indicate On). If it is not, press the On/Off switch on the Command & Control Center to start the generator.
  - i. After the generator has been operated for 20 minutes with the generator on, the system controller will automatically disable the purge option.

Verify that the generator’s output frequency is 59-61 Hz. If the frequency is not within that range, contact Smart Power Systems at (231) 832-5525 for more information.

10. Prior to applying full load, and after the oil temperature is above 120°F verify proper operation of the cooler fan by feeling for airflow being pushed out of the face of the cooler. If the air is not being pushed through the cooler face contact Smart Power Systems at (231) 832-5525 for more information. Verify that the air passing through the cooler and the fan is not restricted.

**WARNING:**

***The SPS Model M-115 and TM-115 have been pre-set at the factory to provide correct frequency and voltage. No pump adjustment is required. If it appears the pump needs to be adjusted, contact Smart Power® Systems at (231) 832-5525 before proceeding. Damage to generator from improper pump adjustment will void the system’s warranty.***

***Improper ventilation will result in system overheating, reduced performance and possible damage to the system and/or cause personal injury. If the system is installed such that improper ventilation exists, the system’s warranty will be voided.***

11. Set “auto-start” option.

If the auto-start option is enabled, the generator will begin generating electricity whenever the PTO is engaged. If the auto-start option is disabled, the generator will not output electricity after PTO engagement until the “on/off” switch is pressed. Select the auto-start function by performing the following steps:

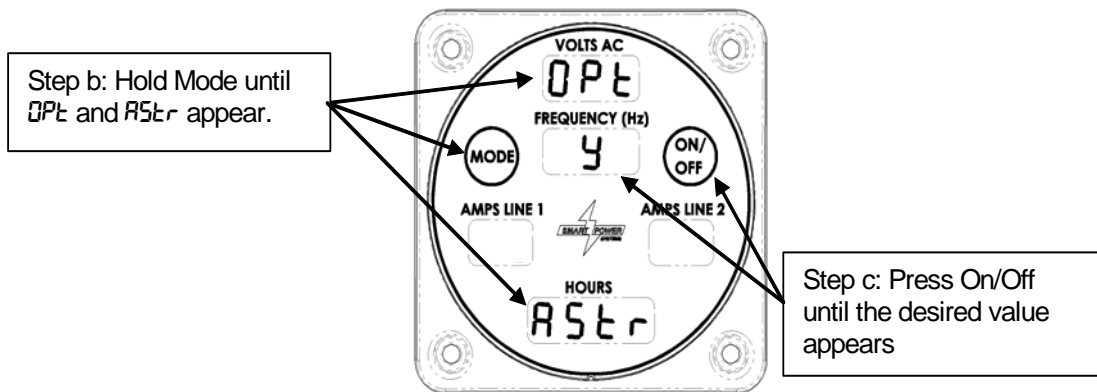



Figure 15

### Enabling Auto-Start Option

- If the Command & Control Center is dark, press the Mode switch to put the display into Normal mode.
- Press and hold the Mode switch until 0PŁ and R5Łr appear (more than 10 seconds). Reference Figure 15.
- Press the On/Off switch until the desired value appears. A 4 means Auto-Start is enabled, an n means Auto-Start is disabled.
- Return to Normal mode by pressing Mode.


### M-115/TM-115 Operation

1. The Command & Control Center will show the generator's output voltage, frequency, current, and system run time whenever the Command & Control Center is in the Normal mode. To access Normal mode, press the Mode switch repeatedly until the correct information is displayed (reference Figure 16).

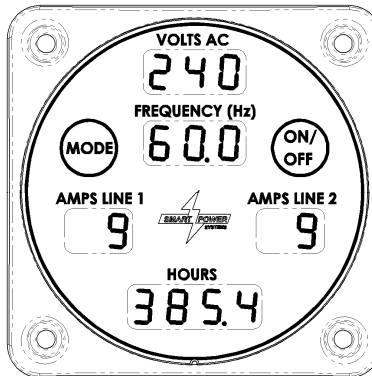

Example of display in normal mode  
Figure 16


2. The PTO driving the SPS hydraulic pump must be engaged for the system to generate electricity.
3. The Command & Control Center is equipped with two Smart Touch® switches, labeled "Mode" and "On/Off" respectively. These switches do not require pressure to be activated, but instead sense the presence or absence of your fingertip. The decimal points in the "Amps Line 1" and "Amps Line 2" fields of the display are used to indicate the status of the Mode and On/Off switches respectively.

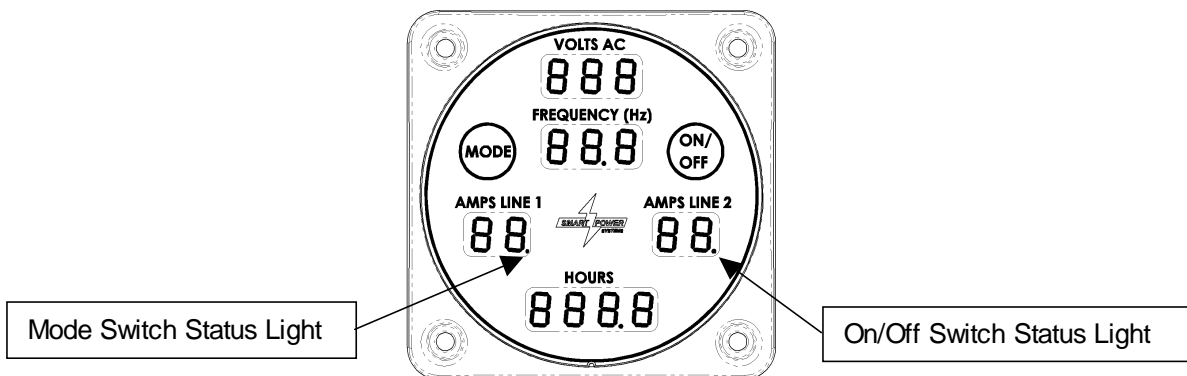

Switch status lights  
Figure 17


Normally, the status lights will be off. When a switch is pressed, the corresponding light will be illuminated. When a status light is flashing, the corresponding switch is calibrating, and the switch should not be pressed. The system controller will ignore the switch while it is calibrating.

4. If the Command & Control Center is powered on, but the generator is not running and no buttons are pressed for 5 minutes, the system will enter Quiescent mode. In Quiescent mode all displays are blank to conserve power. To return to Normal mode from Quiescent mode, press the Mode switch.
5. Whenever the PTO is engaged and the system controller is in Normal or Quiescent mode, the generator can be switched from an “off” state to an “on” state, and vice-versa, by pressing the “on/off” switch on the Command & Control Center. If the PTO is not engaged or the hydraulic pressure is too low when the “on/off” switch is pressed, the following screen will be displayed:

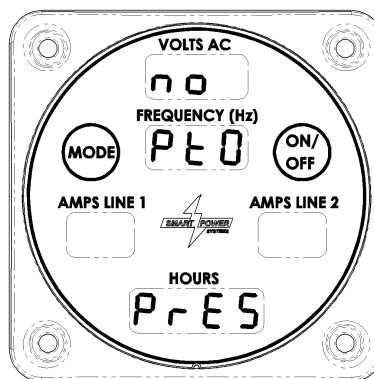


**Example of low hydraulic pressure display  
Figure 18**

6. If the M-115/TM-115 system controller has been set to “auto-start”, the generator will begin to produce power whenever the PTO is engaged. See installation instructions for the directions to select the “auto-start” options.
7. Additional Information provided by the Command & Control Center:
  - a. When the Command & Control Center is in Normal mode, pressing the Mode switch once will display the oil temperature (reference Figure 19).

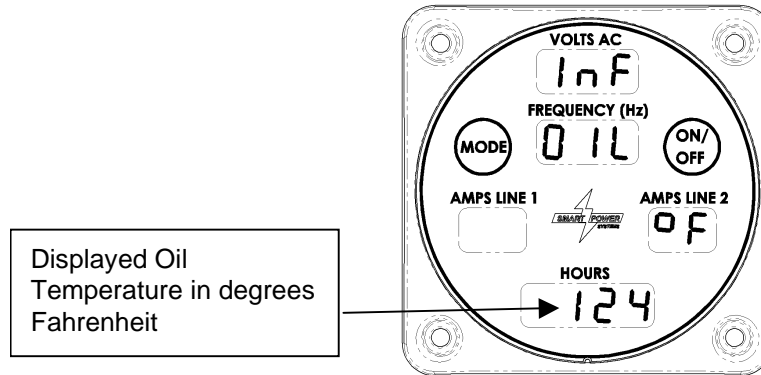


**Example of oil temperature display**  
**Figure 19**

- b. When the Command & Control Center is in Normal mode, pressing the Mode switch twice will cause the amount of time since the oil filter was last changed to be displayed (reference Figure 20):

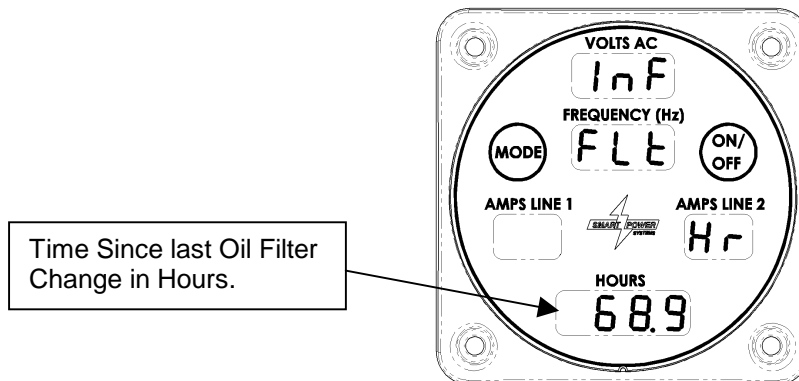

**Example of oil filter run time display**  
**Figure 20**

- c. When the Command & Control Center is in Normal mode, pressing the Mode switch three times will cause the configuration of the generator system controller to be displayed. The number displayed corresponds to the maximum power output of the generator in kilowatts (reference Figure 21).

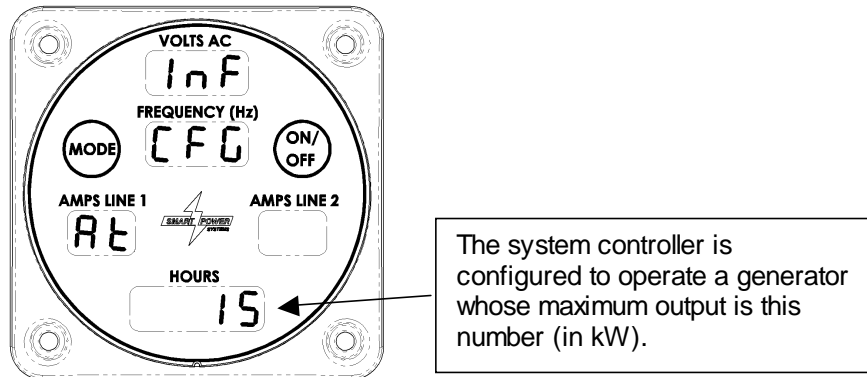


**Example of configuration display  
Figure 21**

- d. If there are no active faults, pressing the Mode switch once more will return the Command & Control Center to its normal mode. If there are active faults, they will be displayed in succession, one each time you press the Mode switch.

See Diagnostics in the trouble shooting section for more information on faults.


8. If the system measures a hydraulic oil temperature that exceeds 175°F (79°C), the system will begin displaying an alarm. If the system measures a hydraulic oil temperature that exceeds 180°F (82°C), the generator will automatically shut down in 30 minutes unless the shutdown is overridden. If the temperature of the hydraulic oil is measured at or above 220°F, the system will immediately shut down unless the high temperature oil warning is overridden. To override the shutdown, perform the following steps:

**Note:** The system must measure a hydraulic oil temperature that exceeds 180° F for this procedure to work.

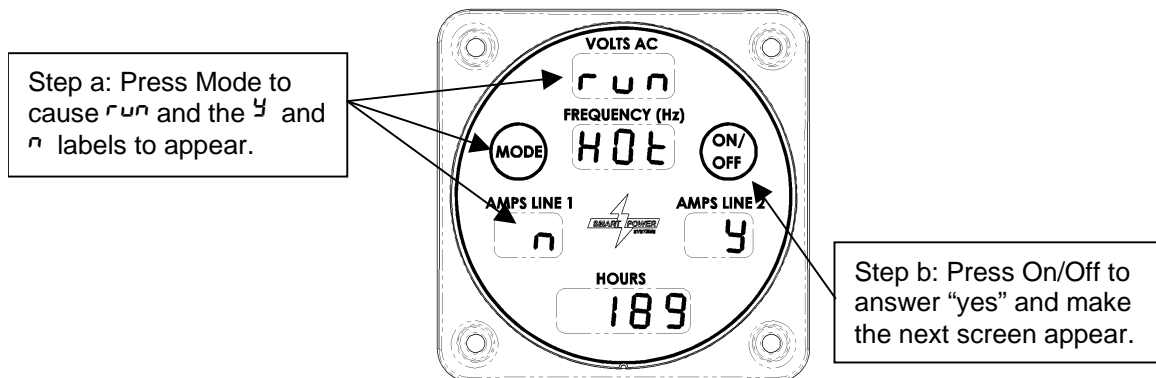

**Example of display in hot oil fault override  
Figure 22**

- a. From the Normal mode display, press Mode, as if you wanted to display the oil temperature. The screen shown in Figure 22 will be displayed instead, asking if you want to “Run hot.”
- b. Note the *Y* and *n* labels below the Mode and On/Off switches. Press the On/Off switch to answer “yes” and proceed to the next screen, or press Mode to answer “no” and proceed to the Oil Temperature Display.

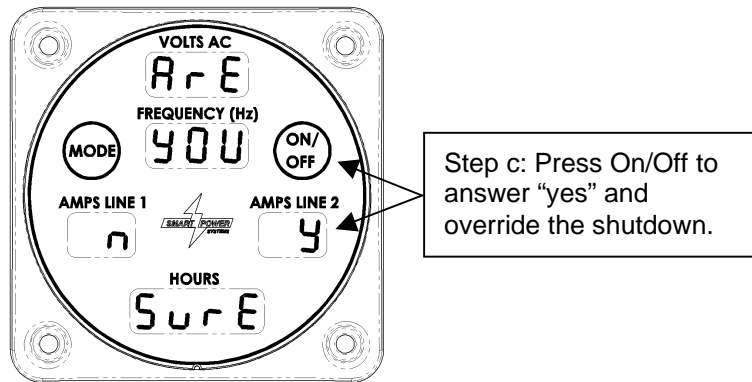

**Example of display in hot oil fault override confirmation**  
**Figure 23**


- c. If your answer was “yes” in the previous step, the confirmation screen shown in Figure 23 will be displayed. Again note the *Y* and *n* labels below the Mode and On/Off switches. Press the On/Off switch to answer “yes” and override the shutdown. Press Mode to answer “no” and proceed to the Oil Temperature Display.

## Special Operating Instructions

### Cold Weather Procedure:

It is strongly recommended that the generator PTO be engaged prior to leaving a heated garage or fire station in cold weather. The system will generate enough heat to keep its hydraulic fluid viscosity low enough for proper operation, in all but the most extremes of low ambient air temperatures.

If the generator is “started” when the hydraulic fluid temperature is measured below 40°F, the following message will be displayed on the Command & Control Center:

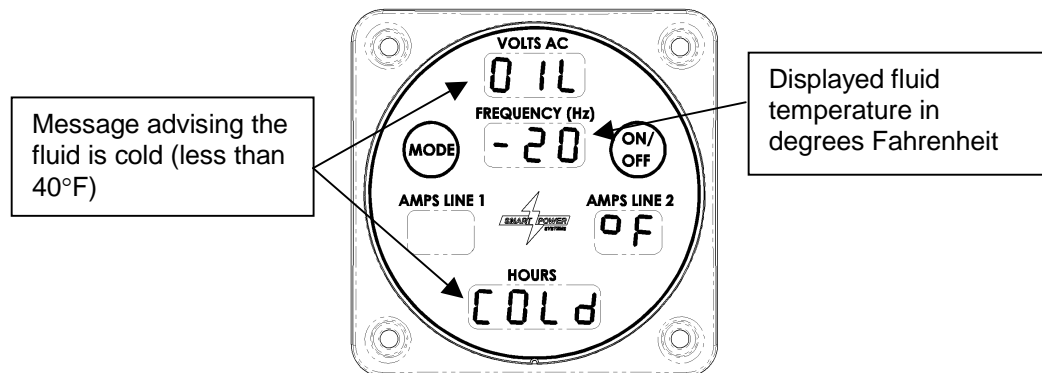

**Example of Command & Control Center when operating with cold hydraulic fluid  
Figure 24**

Operating Modes when the system START button is activated (or when the system is in “autostart”):

- When the meter displays hydraulic fluid temperatures below 20°F, the hydraulic system will bypass the generator motor and the generator will not produce power. This mode warms the hydraulic fluid.
- When the meter displays hydraulic fluid temperatures between 20° and 40°F, the generator rotor will turn at a reduced RPM and the generator will not produce power. This mode warms the hydraulic fluid to 40°F.
- When the meter displays hydraulic fluid temperatures that exceed 40°F, the system will then commence full power generating operations.

## Maintenance Instructions

### **WARNING:**

***Do not perform maintenance while system is running.***

1. Perform regular, periodic checks to verify:
  - a. The cooler, the cooler fan and generator vents are not plugged by debris.
  - b. There are no fluid leaks within the framework of the generator, along the hoses, or at the pump.
  - c. The hoses are not cut, chaffed, bulged or kinked.
  - d. That no electrical connections are loose.
  - e. That the hydraulic fluid level in the reservoir is full in the sight gage and the hydraulic fluid is clean and bright red in color.
  - f. That the bolts mounting the pump to the PTO are not loose.
  - g. If the hydraulic fluid appears dirty or black in the reservoir sight gage, replace the fluid and filter immediately. Also, if the hydraulic fluid sustains a temperature over 175° F, replace the fluid immediately. Oxidation can occur naturally over time and can be accelerated with over temperature operation, affecting generator output. Always change the filter when the hydraulic fluid is changed.

### **WARNING:**

***When adding or replacing hydraulic fluid, always use clean, new Dexron III fluid.***

***Do not power wash the generator. Doing so will void the system's warranty.***

***Do not allow liquid to enter the generator.***

***If the outside of the generator requires cleaning, wipe surface with a damp cloth.***

***Clean the Command and Control Center using soap and water with a soft cloth only. Improper cleaning, handling and use that may scratch, gouge, chip, fade or otherwise damage the metallic coating and display surfaces are not covered under the device warranty.***

2. Replace the oil filter after every 250 hours of operation, or every three (3) years (whichever comes first). Use Dexron III fluid and the following filter:


Hydac 0085 MA010 P

**Lubricate the oil filter gasket with Dexron III before installation to permit proper sealing of the filter.**

**WARNING:**


***Do not by-pass the filter or alter filtration plumbing in any way. Doing so will void the system's warranty.***

3. The system controller automatically records the time from the previous filter change. The hours since the previous filter change can be accessed using the Command & Control Center by pressing the Mode switch until the following screen appears (reference Figure 25):

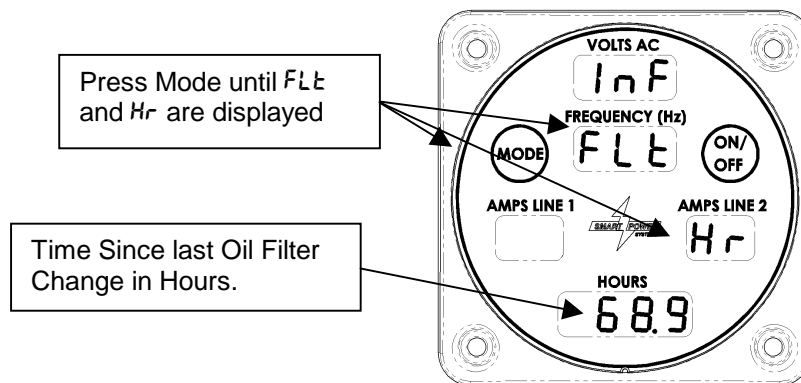

**Example of oil filter run time display  
Figure 25**

4. The Command & Control Center will flash a fault when 250 hours have passed since the previous filter change. After replacing the filter, this fault can be removed from the display, and the filter run time can be reset by performing the following steps:

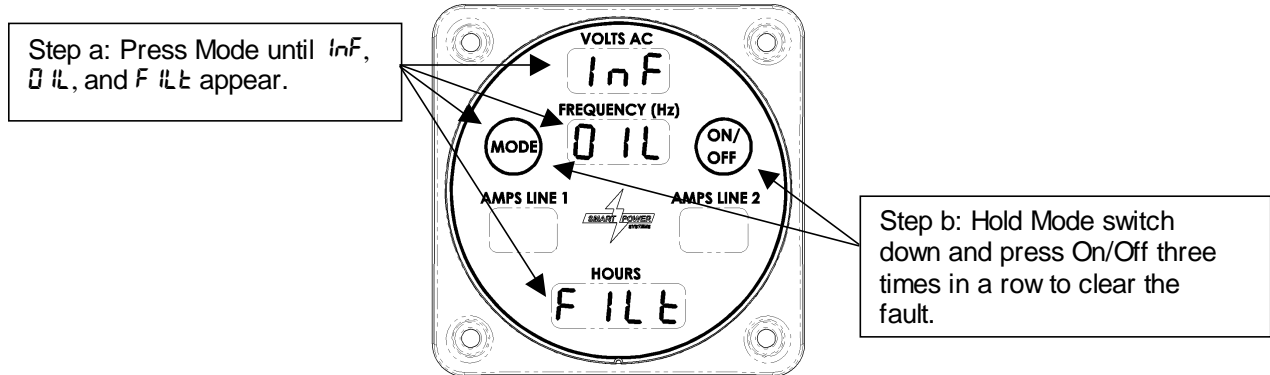

**Example of oil filter service warning display**  
**Figure 26**


- Press the Mode switch repeatedly until the screen as shown in Figure 26 appears. Note: This screen will appear only when the oil filter fault is active.
- While holding the Mode switch down, press and release the On/Off switch three times in succession, then release the Mode switch. The Oil Filter Fault display will be removed and replaced by another screen. The fault has been cleared and the timer reset.
- When the fault has been cleared, the system automatically enters purge mode to purge any entrapped air from the hydraulic lines. See Figure 14. The system must be purged for 30 minutes, 20 of which must be with the generator ON. Turn off the main power breaker during purge (See Figure 12). While purging, the system will not produce usable electrical power.

## Troubleshooting Guide

### Diagnostic:

The Command & Control Center will display certain faults that can assist a service technician in trouble shooting a problem with the generator system. When these faults occur, the fault message will periodically flash on the Command & Control Center, interrupting the normal display. Reference Figure 27 for an example of an over-current fault.

The faults can also be accessed by repeatedly pressing the mode switch. After displaying the oil temperature and oil filter time, the next display will be the first active fault. Each time the Mode switch is pressed; the next fault will be displayed. When there are no more faults to display, the Command & Control Center will return to Normal mode.

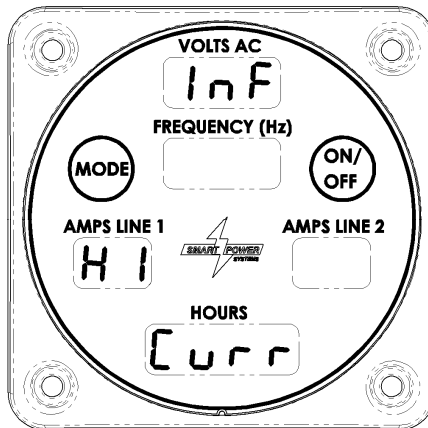

**Example of high current in Line 1 fault display  
Figure 27**

**Diagnostic Faults:**

The following is a list of the diagnostic faults, with a brief explanation of each.

<b>String</b>	<b>Class</b>	<b>Meaning</b>
<i>ULU ctrl</i>	Alarm	The control valve feedback is invalid, indicating the system is not under control. Voltage and/or Frequency may be out of specifications.
<i>H I curr</i>	Alarm	Overcurrent condition. The line in which the overcurrent condition exists is indicated by the location of the "H I" string: If in the "Amps Line 1" field, the overcurrent is in line 1; If in the "Amps Line 2" field, the overcurrent is in line 2.
<i>bRd Cr 1</i>	Alarm	Current sensor fault on line 1. The indicated current may be incorrect.
<i>bRd Cr 2</i>	Alarm	Current sensor fault on line 2. The indicated current may be incorrect.
<i>bRd FLd</i>	Alarm	Field Controller Ground Fault. Output voltage may vary.
<i>bRd Volt</i>	Alarm	Voltage Sensor Fault. The indicated voltage may be incorrect.
<i>O IL HOt &lt;Temp&gt;</i>	Alarm	Oil temperature is getting too high (>175° F). Measured Temperature in the "Hours" field
<i>O IL HOt &lt;Temp&gt;</i>	Override	Oil Temperature is too high (>180° F). Measured Temperature in the "Hours" field
<i>O IL HOt &lt;Temp&gt;</i>	Shutdown	Oil Temperature dangerous (>220° F). Measured Temperature in the "Hours" field
<i>bRd Ind</i>	Alarm	Indicator Light Ground Fault. The indicator light may not function properly.
<i>bRd tSnS</i>	Alarm	Temperature Sensor Fault. The indicated oil temperature may be incorrect.
<i>bRd ALrt</i>	Alarm	Buzzer Ground Fault. The audible alert buzzer may not function properly.
<i>bRd dISP</i>	Alarm	Display Ground Fault. The Display may not operate properly.
<i>LS FRn</i>	Alarm	Low Side Fan Short. The Fan may not operate properly
<i>CHG OIL F ILT</i>	Service Warning	Service Warning: Change the Oil Filter

**Table 3**

**Note:** The fault “Classes” are defined in the table below:

<b>Class</b>	<b>Meaning</b>
<b>Service Warning</b>	Normal maintenance needs to take place.
<b>Alarm</b>	A condition requires the immediate attention of the operator.
<b>Shutdown</b>	A condition causes the immediate shutdown of the generator.
<b>Override</b>	A condition that will cause the generator to be shut down in 30 minutes unless explicitly overridden by the operator.

**Table 4**

### **Hydraulic Problems:**

1. **Cavitation:**

***Cavitation is caused by trying to pump more fluid than is available at the pump*** inlet due to system restrictions. Pump cavitation sounds like “marbles” passing through the pump. Conditions frequently associated with cavitation are the following:

- a. Too many restrictive fittings such as elbows and reducers on the pump inlet hose.
- b. Tight bends or kinks in pump inlet hose and/or tubing.
- c. Reservoir placement resulting in low head pressures.
- d. Low fluid level associated with reservoir placement.
- e. Under sized pump inlet hose (minimum pump inlet hose size is 1”).
- f. Excessive long inlet hose (may be corrected by using larger hose).
- g. Cold hydraulic fluid.

Finding the cause and correcting it should stop cavitation.

Install a 0-25 psig gauge in line between inlet hose fitting and pump inlet port. Engage PTO. Operate genset with no load for twenty minutes to purge air out of the system. Observe the pressure reading. The pressure should always be positive. If the pressure is not positive, system repair/rework is required.

2. **Aeration:**

***Aeration results from air being drawn into the system*** through leak paths or a low fluid condition. Aeration makes a “growling” sound and produces visible bubbles in the fluid stream and/or reservoir. Conditions frequently associated with aeration are the following:

- a. Air leaks in the pump inlet flow path.
- b. Low fluid level allowing air to be drawn into the system.

Verify there are no air bubbles in the fluid by viewing inside the reservoir. If there are air bubbles, check fluid level, tighten all fittings, and look for cracked fittings or hose leaks on the pump inlet line. Replace any suspect parts and adjust fluid level.

After correcting any problems, again operate the generator twenty minutes to purge air out of the hydraulic fluid. Note that any bubbles seen in the reservoir indicate leakage in the pump inlet line.

3. **Differential Pressure:**

***Differential pressure between the inlet pressure and the case pressure over 7 psig causes the piston shoes to lift off the swash plate.*** This occurs due to the excessive lower pressure created on the fill (down) stroke of the piston. When the swash plate begins its upstroke, with pump rotation, it comes back into contact with the piston shoe, creating chatter.

**NOTE: This is NOT NORMAL.** The piston shoes should always remain in contact with the swash plate. The causes of and correction for this problem are the same as for cavitation above.

With the pressure gauge still installed in the suction line at the pump inlet port, install a second gauge (0-50 psig pressure gauge) in the case drain line at the pump case port. Next, engage the PTO and operate the genset with no load for twenty minutes to purge air out of the fluid. Note both gauge readings. If the differential pressure at the case is greater than 7 psig, the suction side plumbing will require evaluation.

**Note the following pressure measurements!**

**Inlet pressures:** Should always be positive.

**Outlet pressure:** Approximately 500 psig with no load on the generator. **Note:** If the gauge is fluctuating, record limits.

**Case drain pressure to inlet pressure differential:** The difference between pump inlet pressure and case drain pressure should not exceed 7 psig. Pump inlet pressure minus case drain pressure should never be less than 7 psig.

Verify the installation of the following hydraulic generator hose diameters:

- a. Inlet hose (suction) on hydraulic pump (attaches to Port "S" on back of pump): 1 inch
- b. Outlet hose (pressure) on hydraulic pump (attaches to Port "B" on back of pump): 5/8 inch
- c. Case drain to hydraulic pump (attaches to Port "L" top side, mid-length of pump): 5/8 inch

**Note:** The hose diameter appears in print along the length of the hose.

4. **System Overheating:**

System overheating may be caused by re-circulation of hot air through oil cooler, dirty or obstructed oil cooler fins, restricted hydraulic fluid flow, excessive generator load, restricted airflow, previously overheated (old) fluid, non-functional fan, or improperly adjusted pump.

- a. Check the oil cooler fins for debris or damage. Clean and/or replace cooler.
- b. Verify that the generator load is not excessive.
- c. Verify that there is proper ventilation.
- d. Verify that the DC fan motor is operating properly.
- e. Verify that warm air within the enclosure is not being re-circulated through the cooler.
- f. Check the hydraulic fluid to see if it is black or darkened. This indicates overheating or aging. Drain and flush the system.
- g. Fill with new, clean hydraulic fluid.
- h. Adjust pump, if necessary, only after contacting Smart Power® Systems at (231) 832-5525.

5. **Low Hydraulic Fluid Level In Reservoir:**

Low hydraulic fluid level in reservoir can be caused by leaking fittings, hoses or pipes.

- a. Check all the fittings for leaks. Tighten any loose fittings that are found (but do not over-tighten).
- b. Replace defective fittings.
- c. Check all tubing for leaks. Repair or replace as necessary.

**Electrical Problems**

1. **No Output Voltage:**

- a. No output voltage may be caused by excessive current draw opening the circuit breakers. (The circuit breakers can be found mounted on the generator wiring enclosure.) Remove all electrical loads from the generator and reset breaker(s). Re-engage electrical load in increments. If possible, monitor current draw with the Command & Control Center to determine which portion of the load is causing the breaker to open.
- b. The PTO is faulty. Verify that the drive shaft that links the pump to the hydraulic pump is spinning when the PTO is engaged. If the shaft is not turning, the probable cause of the failure is a non-functional PTO. Contact the PTO manufacture or qualified representative for further information.

- c. The system controller unit has loss power (reference Figure 2). The Command & Control Center would be stay dark even after the mode and/or on/off switch is pressed. Verify that the vehicle +12V supply has both +12 volts and ground. If 12 volts is not available check the vehicle for a blown fuse or a loose/open electrical connection.
- d. The stator field may be shorted or open. With a flashlight, check the generator windings visible through the ventilation slots. If the windings appear burnt in any area, the generator must be replaced. If the windings are not burnt, disconnect wires U1, U2, U5, and U6 from the terminal strip located in the generator wiring enclosure and make resistance measurement. The resistance between wires U1 and U2, and wires U5 and U6 should be between essentially 0 ohms. Contact Smart Power® Systems at (231) 832-5525 if any problems are found.

**WARNING:**

***Do not attempt to measure stator field resistance while the system is operating. Electrical shock may occur.***

- e. The exciter field may be shorted or open. With a flashlight, check the generator windings visible through the ventilation slots. If the windings appear burnt in any area, the generator must be replaced. If the windings are not burnt, disconnect the exciter field (wires F1 and F2) from the field controller inside the generator wiring enclosure. Measure the resistance of the exciter field (between F1 and F2) using an ohmmeter. The resistance of the exciter field should be essentially 0 ohms. Contact Smart Power® Systems at (231) 832-5525 if any problems are found.

**WARNING:**

***Do not attempt to measure the exciter field resistance while the system is operating. Electrical shock may occur.***

- f. The generator drive motor or coupling is faulty. Observe the generator while the system is engaged. If the coupling is not turning, or if it is turning but the generator is not, one or more of the coupling components may be damaged and must be replaced. Also, verify that the coupling halves are mating. If the coupling halves are not mating, remove the hydraulic motor from the generator to inspect coupling and the rubber insert between the coupling halves. Replace components as necessary, reposition and tighten coupling setscrew so both halves of the coupling are mating correctly.
- g. The pump is faulty. If no faults are found in steps a. through f., the problem is likely to be a non-functional pump. Contact Smart Power® Systems at (231) 832-5525 for further instructions.

2. **Output voltage exceeds 130 volts or falls below 110 volts AC on a 120 volt line:**

- a. Verify that the hydraulic system is not overheating by viewing the temperature gauge in the reservoir sight gauge. The temperature should not exceed 175° F. If the temperature is greater than 175° F, follow instructions for system overheating (See hydraulic problems).
- b. The hydraulic pump speed may be too low. Verify that the hydraulic pump speed is above 750 RPM. Pump speed can be calculated by multiplying the engine RPM by the PTO ratio. Adjust the engine speed or PTO ratio if necessary.
- c. The generator speed may be incorrect. The generator output should be between 59-61 Hz. If it is not, contact Smart Power® Systems at (231) 832-5525 for further instructions.
- d. If the problem is not detected by performing steps a. through c., contact Smart Power Systems.

3. **Generator Noise:**

Generator noise can be caused by defective generator bearings or a faulty generator/hydraulic motor coupling.

- a. Contact Smart Power® Systems if bearings need replacement.
- b. Check the generator/hydraulic motor coupling and replace it if necessary.

If problems occur other than those listed call **Smart Power® Systems [(231) 832-5525]** for additional assistance.

**M-115/TM-115 Model Matrix**


<b>MODEL P/N</b>	<b>DESCRIPTION</b>	<b>TRAY ASM P/N</b>	<b>PUMP ASM P/N</b>	<b>RANGE WR-WIDE RANGE</b>	<b>PUMP DISP. CC</b>	<b>SHAFT K-KEYED S-SPLINED (STD)</b>	<b>SHAFT ROTATION R-CW L-CCW</b>	<b>MOTOR DISP. CC</b>	<b>POWER OUTPUT KILOWATT</b>
1601115	GENERATOR, M-115, R HAND PUMP	<b>8583057</b>	<b>8510035</b>	WR	74	K	R	28	15
1611115	GENERATOR, M-115, L HAND PUMP	<b>8583057</b>	<b>8510037</b>	WR	74	K	L	28	15
1611215	GENERATOR, M-115 W/O PUMP	<b>8583057</b>	<b>NONE</b>	N/A	N/A	N/A	N/A	28	15
1601415	GENERATOR, TM-115, R HAND PUMP	<b>8583058</b>	<b>8510035</b>	WR	74	K	R	28	15
1611415	GENERATOR, TM-115, L HAND PUMP	<b>8583058</b>	<b>8510037</b>	WR	74	K	L	28	15
1611515	GENERATOR, TM-115 W/O PUMP	<b>8583058</b>	<b>NONE</b>	N/A	N/A	N/A	N/A	28	15

**Table 5**


**M-115/TM-115 Generator  
Major Component Numbers  
(reference Figures 28, 29, 30 & 31)**

	1	2	3	4	5	6	7	8	9	10	11	12	
MODEL PART NUMBER	GENERATOR	OIL COOLER	ASM, FAN	ASM, FILTER	PR. SWITCH FAN CONT.	TRAY	FILTER ELEMENT	HOUSING BOOST	HYD. MOTOR	OIL RESERVIOIR ASM.	SYSTEM CTL	PROP. CONT. VALVE	PUMP ASM.
<b>1601115</b>	8594115	8594446	8530000	8590014	8590019	8593049	8590030	8594448	8505012	8592001	8505024	8594453	8510035
<b>1611115</b>	8594115	8594446	8530000	8590014	8590019	8593049	8590030	8594448	8505012	8592001	8505024	8594453	8510037
<b>1611215</b>	8954115	8594446	8530000	8590014	8590019	8593049	8590030	8594448	8505012	8592001	8505024	8594453	NONE
<b>1601415</b>	8954115	8594446	8530000	8590014	8590019	8593049	8590030	8594448	8505012	8592001	8505024	8594453	8510035
<b>1611415</b>	8954115	8594446	8530000	8590014	8590019	8593049	8590030	8594448	8505012	8592001	8505024	8594453	8510037
<b>1611515</b>	8954115	8594446	8530000	8590014	8590019	8593049	8590030	8594448	8505012	8592001	8505024	8594453	NONE


**Table 6**

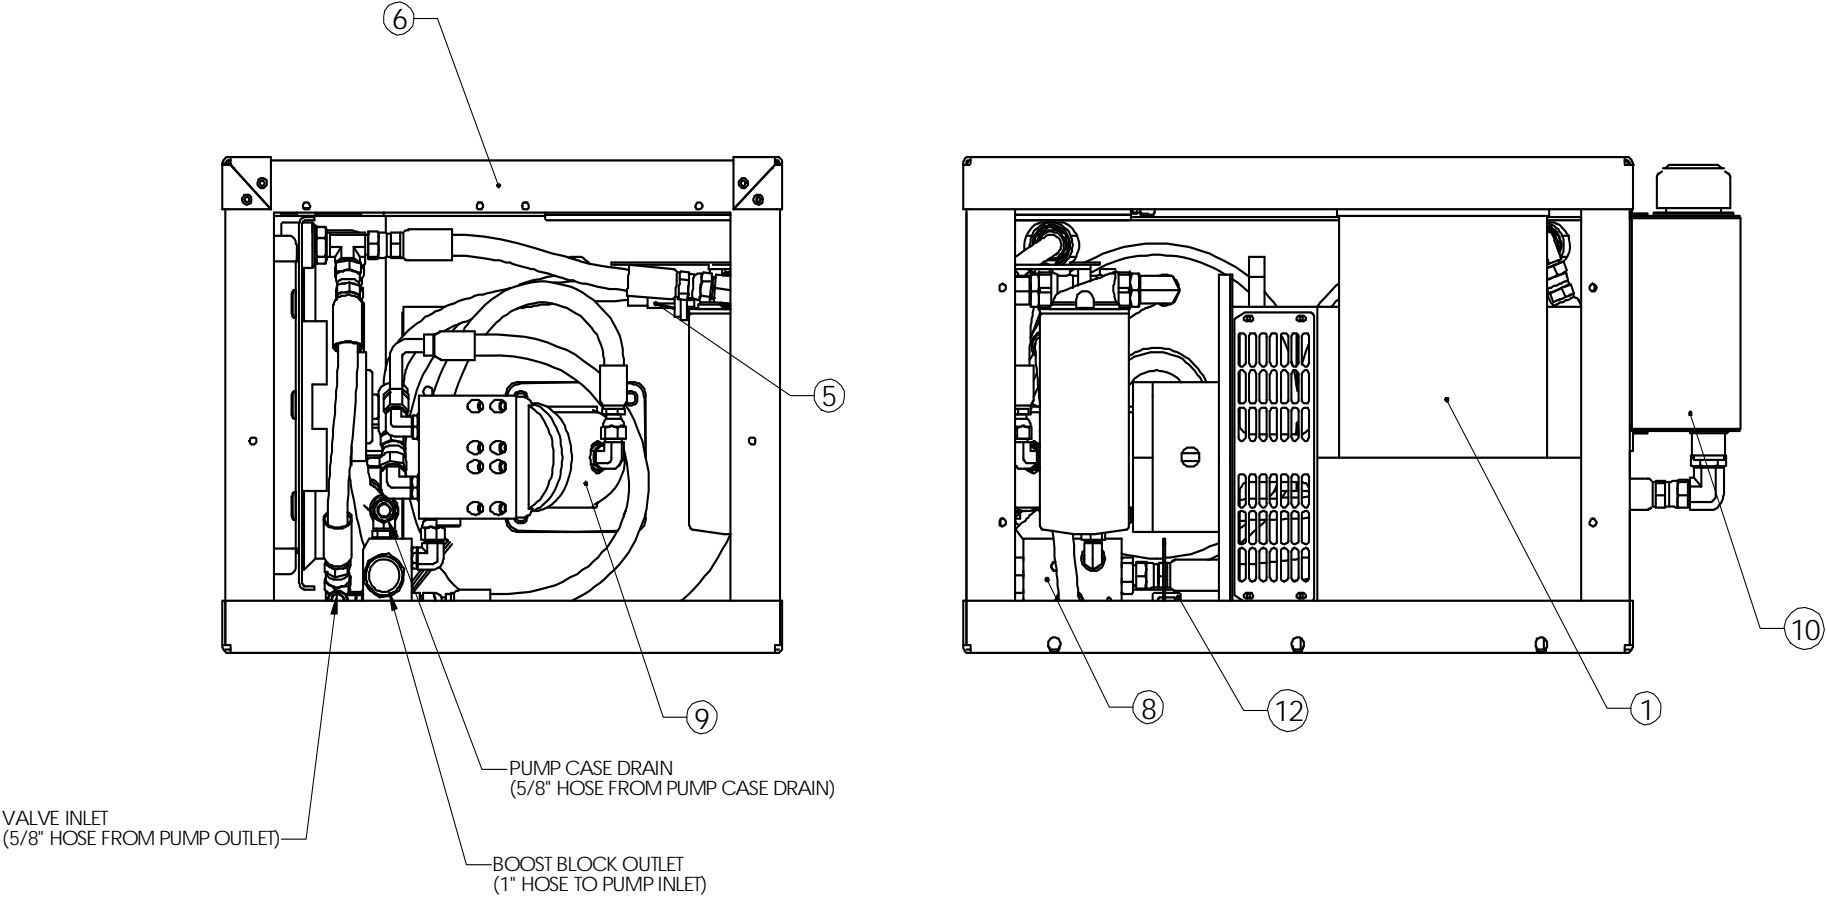



**M-115 Assembly drawing  
Figure 28**

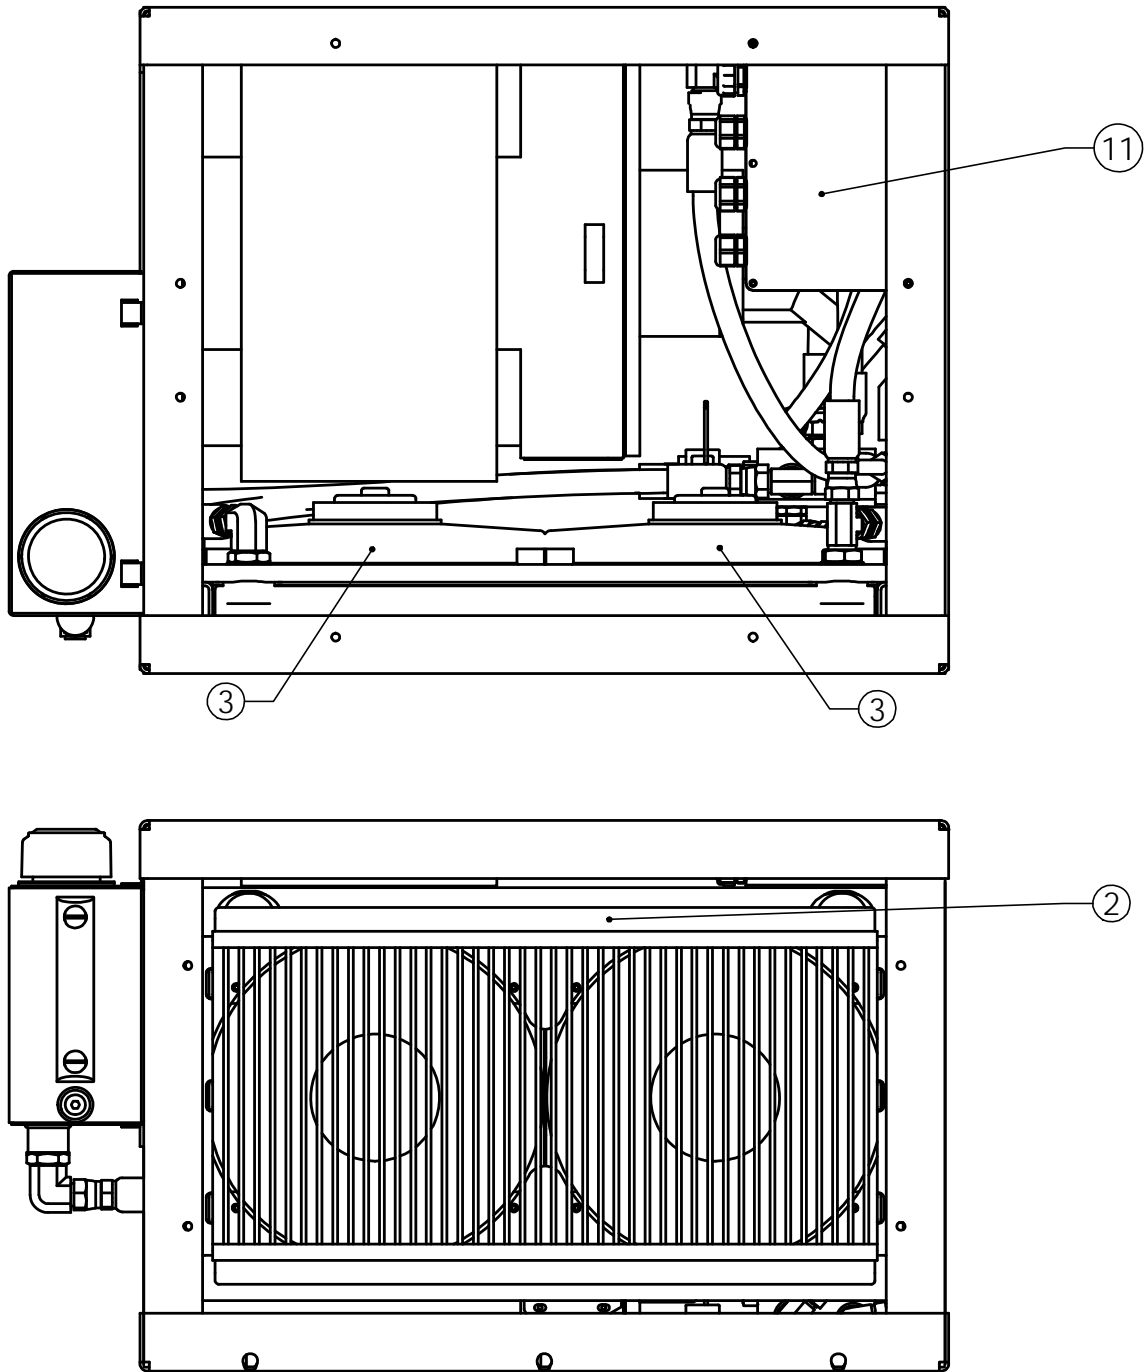

M-115 Assembly drawing  
Figure 29

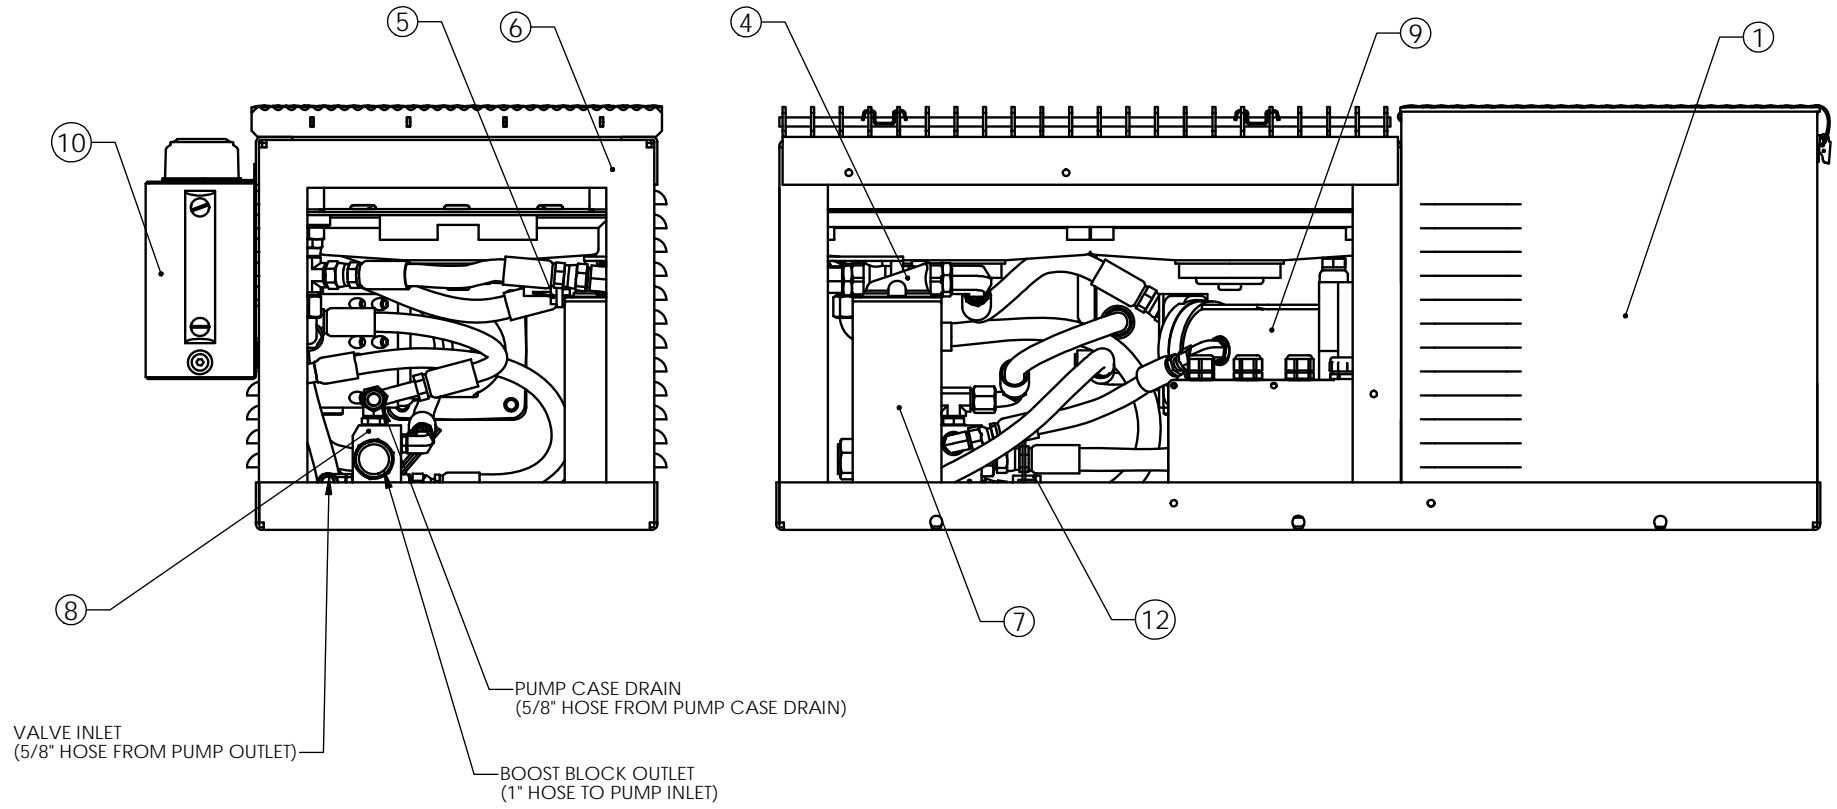

TM-115 Assembly drawing  
Figure 30

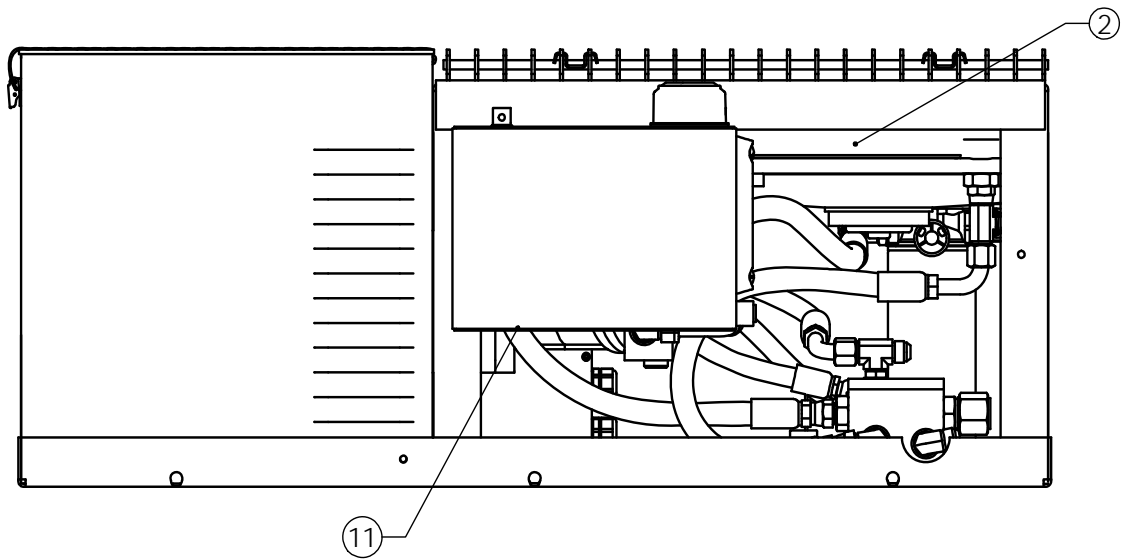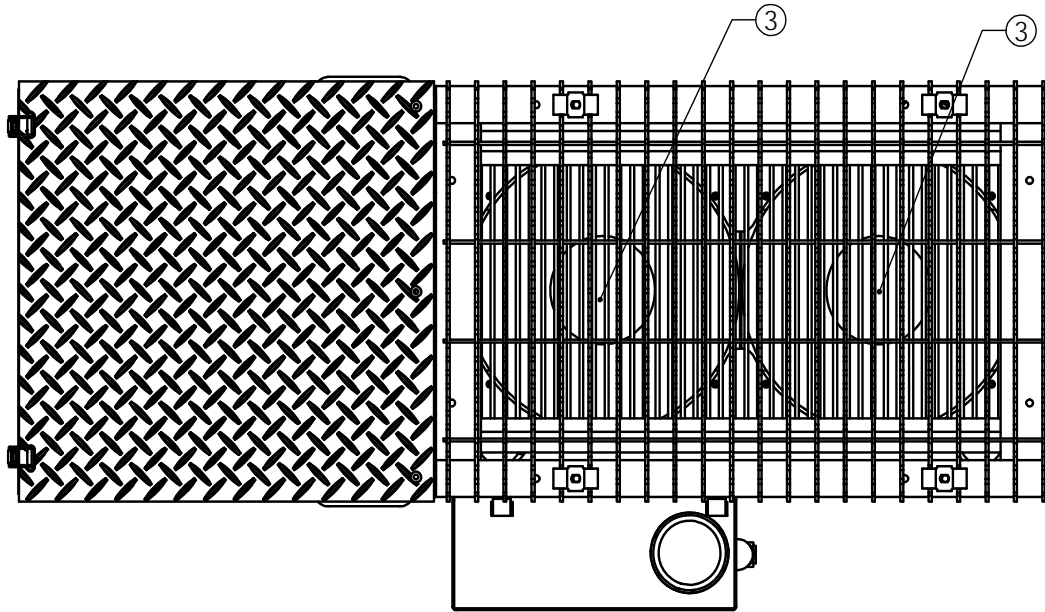

TM-115 Assembly drawing  
Figure 31

## Pump Adjustment

### **WARNING:**

***The SPS M-115/TM-115 has been pre-set at the factory to provide correct frequency and voltage, no pump adjustments are required. If it appears the pump needs to be adjusted, contact SPS at (231) 832-5525 before proceeding. Damage to the generator from improper pump adjustments will void the system's warranty.***

***To prevent permanent, un-repairable damage to the generator, never adjust the hydraulic pump so the generator's output frequency exceeds 65 Hz.***

***Make adjustments to the hydraulic pump flow control with all electrical loads disconnected from generator.***

***Never adjust the pump's pressure control.***

### **Reasons for adjusting the pump:**

1. Generated output frequency is "too low." Verify output frequency when the vehicle is in fast idle and oil temperature is below 150°F. If the frequency drops below 59Hz, the pump output flow may need to be increased.
2. The hydraulic system is running excessively hot: If the system's oil temperature is running above 160°F with an ambient air temperature of 80°F, the pump output flow may need to be decreased. Before making any adjustment, verify the system is getting adequate ventilation, that the fans are both operating, the oil cooler air passageways are not plugged and the hot air exiting the cooler is not being drawn back through the cooler. Operate system after correcting ventilation problems to validate whether the system still overheats prior to making pump adjustment.


**Note:** The generator's output frequency cannot be decreased by adjusting the pump flow. If the generator output frequency is too high, contact SPS at (231) 832-5525 for further instructions.

### **Pump adjustment procedure:**

1. Enable the generator Pump Set option.


The system controller has been designed to provide a Pump Set option. With this option applied, the generator will turn at the maximum speed allowed by the hydraulic pump to allow proper adjustment of the pump's flow.

The Pump Set option can be accessed by performing the following steps:

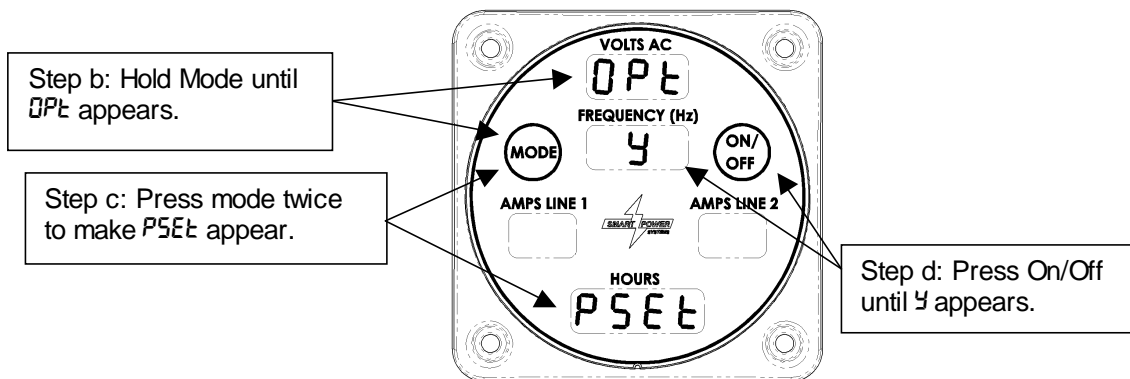


**Enabling pump set option  
Figure 32**

- If the Command & Control Center is dark, press the Mode switch to put the display into Normal mode.
- Press and hold the Mode switch until 0PEt appears (more than 10 seconds). Reference Figure 32.
- Press (and release) the Mode switch until PSEt appears.
- Press the On/Off switch until a 4 appears, indicating Pump Set option is Active.
- Return to Normal mode by pressing the Mode switch until the screen shown in Figure 33 is displayed. Pump Set will still be active.

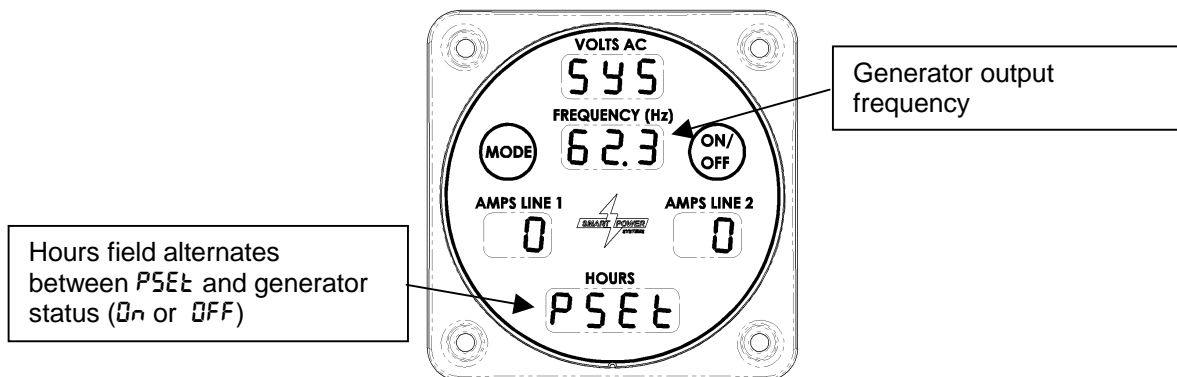


**Example of normal display with Pump Set option set  
Figure 33**

2. Adjust pump compensator for style “A” pump:
  - a. Loosen and remove flow control cap (Reference Figure 34).
  - b. Loosen the flow control pressure jam nut.
  - c. While monitoring the generator’s output voltage, slowly rotate the flow control set screw with a 3mm hex wrench. Adjust the flow control until the generator’s output frequency is 63.8 Hz.
  - d. While keeping the setscrew from rotating, with the hex wrench, re-tighten the jam nut.
  - e. Replace and tighten the flow control cap.

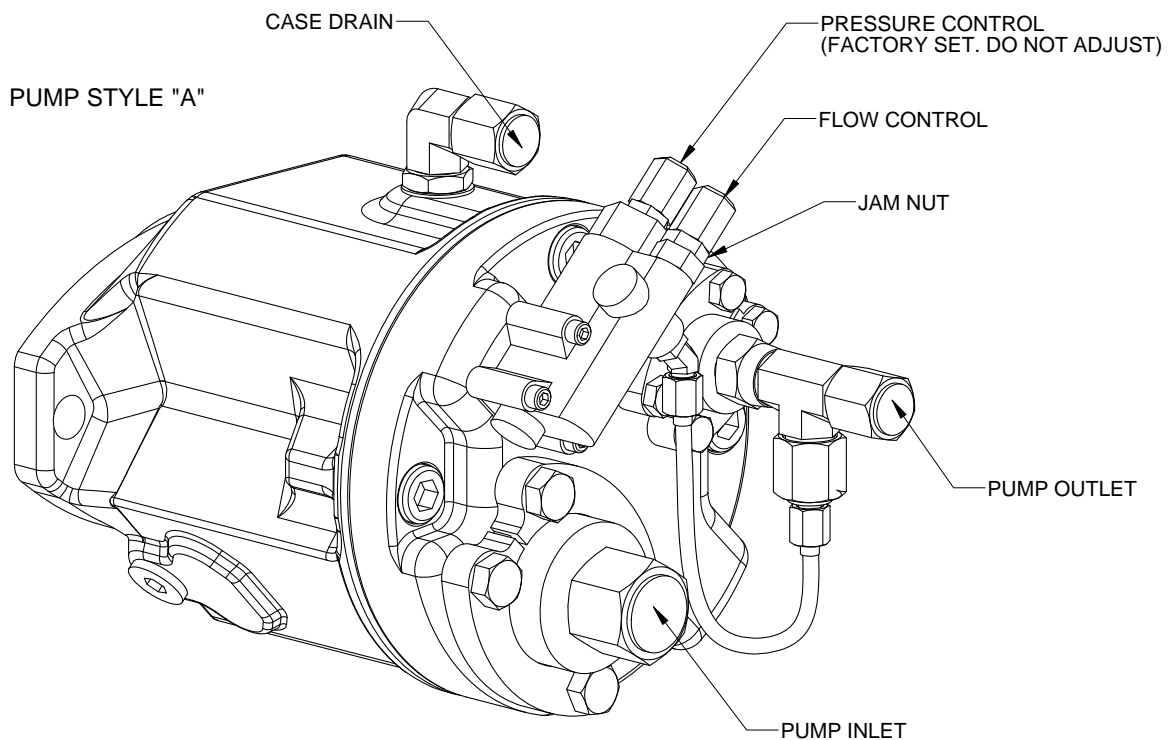

**Pump assembly style “A”  
Figure 34**


3. Adjust pump compensator for style “B” pump:
  - a. Loosen the flow control pressure jam nut (Reference Figure 35).
  - b. While monitoring the generator’s output voltage, slowly rotate the flow control set screw with a 4mm hex wrench. Adjust the flow control until the generator’s output frequency is 60.5 Hz.
  - c. While keeping the setscrew from rotating, with the hex wrench, re-tighten the jam nut.
  - d. Replace and tighten the flow control cap.

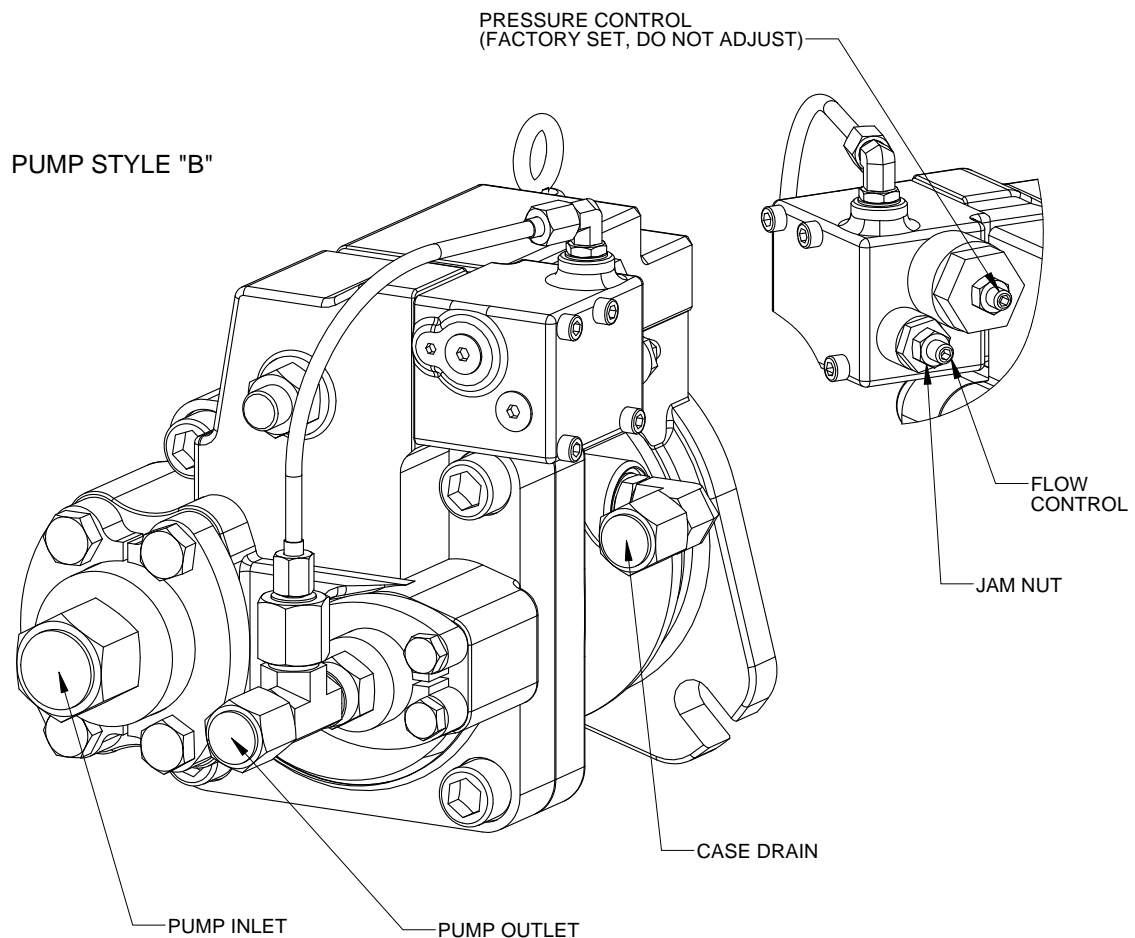

**Pump assembly style “B”**  
**Figure 35**

4. Enable the generator Pump Set option.

After the pump has been properly adjusted, disable the Pump Set option by performing the following steps:

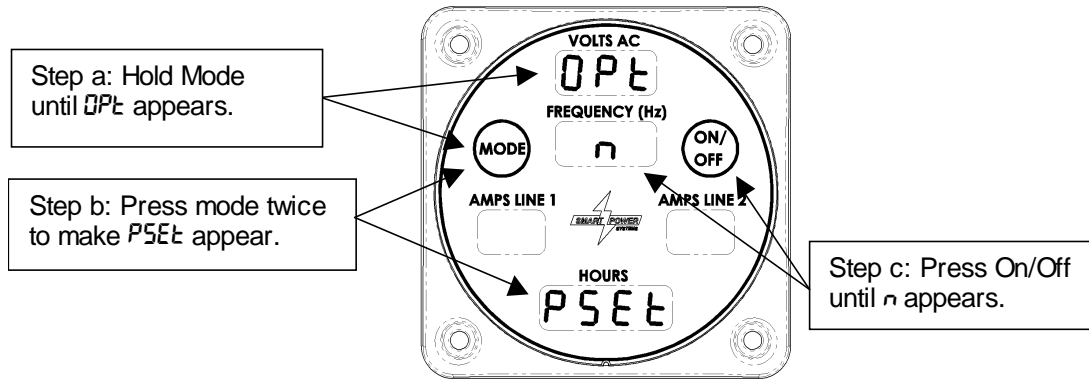

**Disabling pump set option  
Figure 36**

- Press and hold the Mode switch until 0PŁ appears (more than 10 seconds). Reference Figure 36.
- Press the Mode switch until P5EŁ appears.
- Press the On/Off switch until an n appears, indicating Pump Set option is inactive.
- Put system into Normal mode by pressing the Mode switch.

**Manufacturers Limited Warranty**  
**Smart Power® Systems Hydraulic Generator**

**Coverage period**

Provided such goods are operated and maintained in accordance with SPS's written instructions, SPS warrants the hydraulic generators manufactured or supplied by it will be free from defects in material and workmanship for a period of five (5) years or one thousand (1,000) hours, whichever comes first, from the date of delivery to the first purchaser. In the case of generators used for rental or demonstration purposes, this warranty coverage period begins on the date the generator is first used for such rental or demonstration purposes. This warranty is extended to all subsequent owners of the generator during the coverage period.

Repair or replacement parts are warranted for ninety (90) days from date of purchase, excluding labor and travel expenses. Any part repaired or replaced during the warranty period assumes the remainder of the warranty or ninety (90) days, whichever is greater.

**Smart Power® Systems responsibilities**

SPS's obligation under the terms of this warranty is limited to the repair or replacement, at its option, of the generator or parts of the generator that do not conform to this warranty.

SPS will pay for the parts and labor, including diagnostic labor, to repair the generator. When necessary, SPS will also pay reasonable labor expenses associated with the removal and reinstallation of the generator into the customer's equipment, up to the maximum time of two (2) hours. For the first two (2) years of coverage, SPS will pay travel time up to two and one-half (2.5) hours and mileage cost up to one hundred (100) miles, if such work is done by an SPS distributor or other service representative designated by SPS.

**Owner's responsibilities**

The owner is obligated to operate and maintain the generator in accordance with the recommendations published by SPS in the genset's operator's manual. The owner is responsible for the costs associated with such maintenance and any adjustments that may be required.

All claims must be brought to the attention of SPS or an authorized distributor or its designated service representative within a reasonable time, preferably within thirty (30) days after discovery that the generator fails to meet this warranty.

The owner is responsible for payment of any of the following expenses that might be incurred as a result of a failure under the terms of this warranty:

1. Rental equipment used to replace the equipment being repaired.
2. Telephone or other communication expenses.
3. Living and travel expenses of the person making the repair (other than those outlined above).
4. The premium costs for overtime labor requested by the owner.

- 
5. The cost of airfreight or other extraordinary expenses for shipment of parts over and above premium surface transportation.

**Limitation**

SPS is not responsible for the repair of generators that is required because of normal wear, accident, misuse, abuse, improper installation, corrosion, lack of maintenance, unauthorized modifications, the use of add-on or modified parts, improper storage or negligence. The warranty is void if the generator is (a) not properly ventilated as described in the Owners Manual or (b) is exposed (due to improper installation or location) to water, salt or abrasive particles such as dirt or heavy dust.

**Normal wear**

This warranty will not cover repair where normal use has exhausted the life of a part or generator. Generators, like all mechanical devices, need periodic parts replacement and service to perform well. It should be remembered that the service life of any generator is dependent on the care it receives and the conditions under which it has to operate. Some applications are very dusty or dirty, which can cause excessive wear when ingested. Such wear, when caused by dirt, dust or other abrasive material that has entered the generator because of improper installation/location is not covered by warranty.

THERE IS NO OTHER EXPRESS WARRANTY.

IMPLIED WARRANTIES, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PUPOSE, ARE LIMITED TO PERIODS OF WARRANTY SET FORTH ABOVE. TO THE EXTENT PERMITTED BY LAW, ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED. **NOTE:** Some states and provinces do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT IS SPS LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. **NOTE:** Some states or provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that may vary from stat to state or province.

No person is authorized to give any other warranties or to assume any other liabilities on SPS's behalf, unless made or assumed in writing by an officer of SPS, and no person is authorized to give any warranties or assume any other liability on behalf of seller unless made or assumed in writing by seller.

Contact your SPS distributor for questions regarding your warranty rights and responsibilities at (231) 832-5525; or visit our website at [www.smartpower.com](http://www.smartpower.com).